

LG 1010
Online User's Guide

Table of Contents

1. Getting Started	1
Understanding This User Guide	2
Turning Your Phone ON and OFF	2
Getting Started	3
Setting Up Your Voicemail	4
Displaying Your Phone Number	4
2. Getting to Know Your New Phone	5
Front View of Phone	6
Viewing the Display Screen	8
Features of Your LG 1010	8
Using the Battery	9
3. Controlling Your Roaming Experience	11
Understanding How Roaming Works	12
Setting Your Phone's Roam Mode	13
Setting an Alert When Roam Charges Apply (Call Guard)	14
4. Making and Answering Calls	15
Making Calls	16
Answering Calls	16
Changing Ringer Volume	17
Adjusting Volume During a Conversation	17
Muting a Call	17
Missed Call Notification	18
Dialing Options	18
In-Call Options	19
End-of-Call Options	20
Saving a Phone Number	20
Finding a Phone Number	21
Dialing and Saving Phone Numbers With Pauses	22
Four-Digit Calling	22
Dialing From the Internal Phone Book	23
Using One-Touch/Two-Touch Speed Dialing	23
Calling Emergency Numbers	23

5. Navigating Through Menus and Entering Text	25
Menu Navigation	26
Working Within the Menu Structure	26
Viewing the Menus	27
Selecting a Character Input Mode	29
Entering Characters by Tapping the Keypad	30
Entering Symbols and Numbers	30
6. Using Service Features	31
Using Caller ID	32
Responding to Call Waiting	32
Three-Way Calling	33
Forwarding Your Calls	34
7. Managing Messaging	35
Setting Up Voicemail	36
Knowing When You Have Messages	36
Message Types	36
New Voicemail Message Alerts	36
Retrieving Your Voicemail Messages	37
Voicemail Box Options	37
Clearing the Message Icon	38
Page/Text Messages	38
Displaying Text Messages	39
8. Managing Call History	41
Viewing Call History (Incoming, Outgoing and Missed)	42
Call History Options	42
Making a Call From Call History	43
Saving a Phone Number From Call History	43
Prepending a Phone Number From Call History	44
Erasing Call History	45
9. Using Your Internal Phone Book	47
Adding a New Internal Phone Book Entry	48
Internal Phone Book Entry Options	48
Finding Internal Phone Book Entries	49
Adding a Phone Number to an Internal Phone Book Entry	50
Editing an Internal Phone Book Entry's Phone Number	51

Editing an Internal Phone Book Entry	51	Erasing a Day's Events	68
Selecting a Ringer Type for an Entry	52	Going to Today's Scheduler Menu	68
Secret Internal Phone Book Entries	52	Displaying the Week or Month View	68
10. Changing Your Phone's Settings	53	Purging Events	69
Adjusting the Phone's Volume Settings	54	Purging All Events	69
Ringer Types	54	Editing an Event's Title	69
Selecting Ringer Types for Voice Calls	54	Editing an Event's Ringer Type	70
Selecting Ringer Types for Messages	55	Editing an Event's Alarm	70
Selecting a Tone Length	55	Editing an Event's Repeating Status	70
Alert Notification	56	Viewing Scheduler Memory Space	71
Silent Mode	56	Using the Calculator	71
Changing the Backlight Time Length	57	Playing Games	72
Changing the Greeting	57	13. Knowing Performance and Safety Guidelines	73
Screen Saver	58	Getting the Most Out of Your Reception	74
Changing the Contrast	59	Maintaining Safe Use of and Access to Your Phone	75
Selecting a Language	59	Caring for the Battery	78
Security Settings	59	Acknowledging Special Precautions and the FCC Notice	79
Selecting a Call Answer Mode	60	Owner's Record	81
Selecting an Auto Answer Mode	60	User Guide Proprietary Notice	81
TTY Access	60	Index83
11. Setting Your Phone's Security	61		
Accessing the Security Menu	62		
Locking Your Phone	62		
Unlocking Your Phone	62		
Changing the Lock Code	62		
Calling in Lock Mode	63		
Using Special Numbers	63		
Erasing Special Numbers	64		
Erasing the Internal Phone Book	64		
Resetting Your Phone	64		
12. Using Your Scheduler	65		
Adding an Event to the Scheduler	66		
Event Alerts	66		
Event Alert Menu	67		
Viewing Events and Event Options	67		

Getting Started

In This Section

- ▶ Understanding This User Guide
 - ▶ Turning Your Phone On and Off
 - ▶ Getting Started
 - ▶ Setting Up Your Voicemail
 - ▶ Displaying Your Phone Number
-

This section walks you through the step-by-step basics of setting up service for your phone, including unlocking and activating your phone and setting up your voicemail. You may have already completed this step. If so, skip to Section 2.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Understanding This User Guide

This user guide introduces you to our technology and all the advantages of your new phone – through easy-to-follow instructions.

- ▶ Sections break down categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- ▶ Tips highlight special shortcuts and timely reminders to help you make the most of your new phone.
- ▶ The Table of Contents and Index help you locate specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate its section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

Tip: If you're viewing this user guide from your computer, simply click on a topic in the Table of Contents or Index, or on any page reference within a section to go directly to that topic.

Turning Your Phone ON and OFF

Turning Your Phone ON

To turn your phone on, press  for approximately two seconds.


Once your phone is ON, it displays “Searching for Service” indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to Standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for network service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone OFF

Press  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Getting Started



Determine if Your Phone is Already Activated

If you received your phone in the mail, it probably has been activated. All you need to do is unlock your phone.

If your phone is not activated, contact your wireless service provider.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press and hold  to turn the phone on.
2. Highlight **Unlock** and press .
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or phone number or try 0000. If none of these work, call your wireless service provider.


Activating Your Phone

If your phone was not activated already, call your wireless service provider for assistance.

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail box and personal greeting as soon as your phone is activated.

To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your pass code, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your pass code).

Note: The voicemail setup process may vary in certain affiliate areas.

Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

1. From the main menu, highlight **Phone Book** and press .
2. Highlight **My Phone #** and press .

2

Getting to Know Your New Phone

In This Section

- ▶ Front View of Phone
 - ▶ Viewing the Display Screen
 - ▶ Your Phone's Features
 - ▶ Using the Battery
-

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using your phone, so this section provides a quick introduction to the basic features of your phone.

Don't forget the other chapters in this advanced user guide. They're filled with additional information about the capabilities and benefits of your new phone. They include detailed step-by-step instructions that familiarize you with features and explain how to customize your phone to meet specific needs.






 



Front View of Phone



1. **Headset Jack:** Provides connection for an optional headset.
2. **Volume Keys:** Adjust the ringer volume in Standby mode or voice volume during a call.
3. **1 Key/Voicemail:** Lets you dial your voicemail box by pressing and holding the key.
4. **Display Screen:** Displays phone status icons and menu items.
5. **4-Way Navigator:** Scrolls through menus and displays the next or previous entry or message.
6. **END/PWR:** Lets you power the phone on or off, end calls or return to the phone's main menu.
7. **CLR:** Lets you clear an entry or back up in a menu.
8. **OK:** Lets you place a call and select menu options.
9. **Microphone:** Can be muted during a call for privacy.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

- ▶  shows your current signal strength.
The more lines you have, the stronger your signal.
- ▶  means your phone cannot find a signal.
- ▶  tells you a call is in progress.
- ▶  indicates you are "roaming" off the network available to you.
- ▶  indicates you have voicemail messages waiting.
Press and hold  to call your voicemail box.
- ▶  indicates you have a text message.
- ▶  indicates your phone is in vibrate mode.
- ▶  shows your current battery charge strength.
(Icon shown fully charged.)

Tip: Display indicators let you know when you're off the network available to you and whether you are operating in digital mode.

Features of Your LG 1010

Congratulations on the purchase of your LG 1010. This phone is lightweight, easy-to-use, reliable and offers many significant features:

- ▶ Single-band capability provides access to other digital networks where the network available to you has implemented roaming agreements (page 11).
- ▶ Text messaging lets you receive e-mail messages on your phone (page 35).
- ▶ The built-in Scheduler lets you schedule alerts to remind you of important events (page 65).
- ▶ One hundred ninety-nine Internal Phone Book entries store up to five phone numbers each (page 47).
- ▶ Speed dialing lets you dial phone numbers by pressing one or two digits (page 23).

Using the Battery

Battery Capacity

Your phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 150 minutes of continuous talk time or approximately 6 days of continuous standby time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert every 30 seconds and then powers down.

Note: Long backlight settings, searching for service and vibrate mode affect the battery's talk and standby times.

Tip: Be sure to charge your phone's battery and watch your indicator to ensure your levels are okay.

Installing the Battery

Your phone comes with a LiIon battery. Follow these steps to install it:

1. Place the battery in the opening at a 45-degree angle with the metal contacts at the bottom, facing downward.
2. Gently press down on the battery until the latch snaps into place.

 
Removing the Battery

To remove your battery for charging, or for any other reason, follow these easy steps:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push the battery release latch up.
3. Remove the battery from the phone at a 45-degree angle.

Charging the Battery

Your phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () blinks and the phone sounds a warning tone.

Always use an approved desktop charger, travel charger or vehicle power adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Desktop Charger

To use the desktop charger provided with your phone:

1. Plug the round end of the AC adapter into the charger holder and the other end into the electrical outlet.
2. Insert the phone (with the battery installed) into the slot.
 - ▶ A **red light** on the charger lets you know the battery is charging.
 - ▶ A **green light** indicates that the battery is at least 80 percent charged.

It takes approximately three hours to fully recharge a completely rundown battery. With the approved LiIon battery, it is okay to recharge the battery before it becomes completely run down.

3

Controlling Your Roaming Experience

In This Section

- ▶ Understanding How Roaming Works
 - ▶ Setting Your Phone's Roam Mode
 - ▶ Setting and Using Call Guard
-


Roaming is the ability to make or receive calls while you're off the network available to you. Your new single-band phone works anywhere on the network and allows you to roam on digital networks virtually anywhere in the U.S. where compatible wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding How Roaming Works

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the network available to you. The following chart indicates what you'll see depending on where you're using your phone.

	Roaming Indicator
Your Network	
Other Digital Networks	

Tip: Remember, when you are using your phone off the network, always dial numbers using 11 digits (1 + area code + number).

Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls while on the network. You may not be able to access certain calling features.





Note: If you're on a call when you leave the network available to you and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think network service is available, turn your phone off and on again to reconnect to the network.

Setting Your Phone's Roam Mode

Your phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode





Choose from two different settings on your single-band phone to control your roaming experience:

1. From the main menu, highlight **Settings** and press .
 2. Highlight **Roaming** and press .
 3. Highlight **Set Mode** and press .
 4. To select an option, highlight it and press .
- ▶ **Network:** This setting allows you to select the network only and prevents roaming on other networks.
 - ▶ **Automatic:** This setting seeks service on the network available to you. When network service is unavailable, the phone searches for an alternative system.

Setting an Alert When Roam Charges Apply (Call Guard)


In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the network available to you.

To Turn the Call Guard Feature On or Off:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Roaming** and press .
3. Highlight **Call Guard** and press .
4. Highlight **On or Off** and press .

Note: Speed Dialing is not available when you are roaming with Call Guard enabled.

To Place Roaming Calls With Call Guard On:

1. From the main menu, dial 1 + area code + the seven-digit number.
(You can also initiate a call from the Internal Phone Book, Call History or text messages.)
2. Highlight **Roam Call** and press .

To Answer Incoming Roaming Calls With Call Guard On:

- ▶ From the main menu, highlight **Answer** and press .

4

Making and Answering Calls

In This Section

- ▶ Making Calls and Answering Calls
 - ▶ Adjusting Volume
 - ▶ Dialing Options
 - ▶ In-Call and End-of-Call Options
 - ▶ Saving and Finding Phone Numbers
 - ▶ Using One-Touch/Two-Touch Speed Dialing
 - ▶ And More
-

Your phone gives you different options for placing calls, so you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Making Calls

Your phone offers many different ways to make calls, including Speed Dialing (page 23) and using Call History (page 43).

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press **CLR** to erase one digit at a time. Press and hold **CLR** to erase the entire number.)
3. Press **OK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **OK**. See “Call Guard” on page 14.)
4. When you’re finished close the phone, press **END** or highlight **End Call** and press **OK**.

Tip: To redial your last outgoing call, highlight **Call History** and press and hold **OK**.

Tip: When making calls off the network available to you, always dial using 11 digits (1 + area code + phone number).

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When a call comes in, answer the call by pressing **OK**. Depending on your settings, your phone notifies you of incoming calls in the following ways:
 - ▶ The phone rings or vibrates.
 - ▶ The LED flashes.
 - ▶ The backlight illuminates.
 - ▶ The screen displays an incoming call message.
 - ▶ If available, the phone number of the caller is displayed.
 - ▶ If the phone number is in your Internal Phone Book, the Phone Book entry’s name is displayed.

The following options are also displayed. To select an option, highlight it and press **OK**.

- ▶ **Answer** to answer the call.
- ▶ **Silence Ringer** to mute the ringer.

Depending on your settings, you may also answer incoming calls simply by opening the flip or by pressing any digit. (To answer a call when you are roaming and Call Guard is enabled, you must highlight **Answer** and press **OK** to answer the call. See “Call Guard” on page 14.)

Note: If your phone is off, incoming calls go to voicemail.

3. To disconnect the call, close the phone, press **END** or highlight **End Call** and press **OK**.

Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the phone is in Standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 54.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the volume keys on the side of your phone during a call.

Muting a Call

There are times when it’s necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

- ▶ Highlight **Mute** and press **OK**. When the phone is muted, “Mute:” flashes on the display.

To unmute a call:

- ▶ Highlight **Unmute** and press **OK**.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry:

- ▶ Highlight the entry and press **OK**. (To dial the phone number, press **OK** again.)

Dialing Options

Dialing options are displayed when you enter numbers in the main menu.

To select an option, highlight it and press **OK**.

- ▶ **[An Internal Phone Book Entry]** to display the entry contained in the speed dial location you entered (if applicable). Press **OK** again to dial the speed dial number.
- ▶ **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, select **Roam Call**. See “Call Guard” on page 20.)
- ▶ **Save** to save the phone number in your Internal Phone Book. (See “Saving a Phone Number” on page 20.)
- ▶ **Find** to display Internal Phone Book entries that contain the entered numbers. (See “Finding a Phone Number” on page 21.)
- ▶ **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 22.)
- ▶ **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 22.)
- ▶ **Exit** to return to the main menu.

Tip: To speed dial a phone number from the main menu, press and hold the speed dial number assigned to the Internal Phone Book entry. (To assign speed dial numbers to Internal Phone Book entries, see “Editing an Internal Phone Book Entry’s Phone Number” on page 51.) If the entry number is two digits, enter the first digit, then press and hold the second digit. (This feature will not work when you are roaming and Call Guard is enabled.)

Some options are displayed as you enter numbers. To select an option, highlight it and press **OK**.

- ▶ **4-Digit Call** to dial the phone number in your Internal Phone Book that ends with the four digits you enter. (See “4-Digit Calling” on page 22.)

In-Call Options

During a call, your phone displays menu options in addition to the main menu.

To select a menu option, highlight it and press **OK**.

- ▶ **Flash** to answer an incoming call using Call Waiting or connect a third party during Three-Way Calling (if applicable).
- ▶ **End Call** to end the call.
- ▶ **Mute or Unmute**
Select **Mute** to mute your phone’s microphone. Select **Unmute** to reactivate the microphone.
- ▶ **Dial 3-Way Call** to call a third party. (See “Three-Way Calling” on page 33.)
- ▶ **Call History** to display the Call History menu. (See Section 8: Managing Call History on page 41.)
- ▶ **Messages** to display the Messages menu. (See Section 7: Managing Messaging on page 35.)
- ▶ **Phone Book** to display the Internal Phone Book menu. (See Section 9: Using Your Internal Phone Book on page 47.)
- ▶ **Display** to change your phone’s display settings. (See Section 10: Changing Your Phone’s Settings on page 53.)
- ▶ **Calculator** to display the calculator. (See “Using the Calculator” on page 71.)

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number, the duration of the call and the following menu options are displayed.

To select an option, highlight it and press **OK**.

- ▶ **OK** to return to the main menu. (You can also press **END**.)
- ▶ **Call** to dial the phone number.
- ▶ **Save** to save the phone number in your Internal Phone Book. (See “Saving a Phone Number” on this page.)

After receiving a call from or making a call to a phone number that is already in your Internal Phone Book, the Phone Book entry name and phone number, the duration of the call and the following menu options are displayed.

To select an option, highlight it and press **OK**.

- ▶ **OK** to return to the main menu. (You can also press **END**.)
- ▶ **Call** to dial the phone number.

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your phone can store up to five phone numbers in each of 99 Internal Phone Book entries. Each entry’s name can contain 16 characters. Your phone automatically sorts the Internal Phone Book entries alphabetically.

To save a number from the main menu:

1. Enter a phone number.
2. Highlight **Save** and press **OK**.
3. Select a label by highlighting **Home**, **Home 2**, **Office**, **Office 2**, **Mobile**, **Mobile 2**, **Pager**, **Data**, **Fax**, **Fax 2** or **No Label** and press **OK**.

Note: A phone number labeled Fax or Data can only be dialed through a personal computer.

4. Enter a name for the entry and press **OK**. (See “Selecting a Character Input Mode” on page 29.)
5. To select an option, highlight it and press **OK**.
 - ▶ **Done** to save the entry.
 - ▶ **Set Speed Dial** to save the phone number in a speed dial location. Highlight a location and press **OK**. (See “One-Touch/Two-Touch Speed Dialing” on page 23.)

After you have saved the number, the new Internal Phone Book entry is displayed. (See “Internal Phone Book Entry Options” on page 48.)

Finding a Phone Number

You can search for Internal Phone Book entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter one or more digits. The more numbers you enter, the more specific the search becomes.
2. Highlight **Find** and press **OK**.
3. To display the Internal Phone Book entry that contains the phone number, highlight the entry and press **OK**. To dial the number, press **OK** again.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press **OK**. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Highlight either **Hard Pause** or **2-Second Pause** and press **OK**.
Hard pauses are displayed as a “P” and 2-second pauses as a “T”.
3. Enter additional numbers.
4. Highlight **Call** to dial the number or **Save** to save the number in your Internal Phone Book and press **OK**.

When dialing a number with a hard pause, highlight **Send Tones** and press **OK** to send the next set of numbers.

Four-Digit Calling

Enter four digits to display the 4-Digit Calling option. If you select **4-Digit Call**, your phone dials the phone number in your Internal Phone Book that ends with the four digits you entered.

To use 4-Digit Calling:

1. Dial the last four digits of an Internal Phone Book entry's phone number.
2. Highlight **4-Digit Call** and press **OK**. Press **OK** again to dial the number. (If more than one entry matches the four digits, highlight the entry you wish to call and press **OK**.)

Dialing From the Internal Phone Book

To dial directly from an Internal Phone Book entry:

1. From the main menu, highlight **Phone Book** and press **OK**.
(For additional ways to display entries, see Section 9: Using Your Internal Phone Book on page 47.)
2. Highlight the entry you want to call and press **OK**.
3. Press **OK** again to dial the entry's default phone number.
4. To dial another number from the entry, highlight it and press **OK** to display the number. Then, press **OK** again to dial the number.

Using One-Touch/Two-Touch Speed Dialing

With this feature, you can dial Speed Dial entries using one key press for locations 1-9 or two key presses for locations 10-99.

To use **One-Touch Dialing** for Speed Dial locations 1-9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Calling...”.

To use **Two-Touch Dialing** for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Calling...”.

Note: Speed dialing is not available when you are roaming with Call Guard enabled.

Calling Emergency Numbers

You can place calls to 911 (dial **9** **1** **1** and press **OK**), even if your phone is locked or your account is restricted.

Navigating Through Menus and Entering Text

In This Section

- ▶ Menu Navigation
 - ▶ Working Within the Menu Structure
 - ▶ Viewing the Menus
 - ▶ Selecting a Character Input Mode
 - ▶ Entering Characters by Tapping the Keypad
 - ▶ Entering Symbols and Numbers
-

This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to learn your way around and how to enter text. You'll find that it makes your phone easier to use.

Menu Navigation

The 4-way navigator on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the 4-way navigator up or down. As you navigate through the menu, menu options are highlighted. Select an option by highlighting it and pressing **OK**.

Working Within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing **OK**.

For example, if you want to view your last incoming call:

1. From the main menu, highlight **Call History** and press **OK**. (It may already be highlighted.)
2. Press the 4-way navigator down to highlight **Incoming Calls** and press **OK**. If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **CLR**.

To go to the main menu:

- ▶ Press **END**.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

Call History

- Outgoing Calls
- Incoming Calls
- Missed Calls
- Erase Calls
 - Outgoing Calls
 - Incoming Calls
 - Missed Calls
 - All Calls

Phone Book

- Find Name
- Find Speed Dial
- Add New Entry
- Services Cust. Solutions/Dir Assist/Account Info/Prepaid
- My Phone #

Messages

- Voicemail
 - Call Voicemail Yes/No
 - Clear Count
- Page/Text (Custom Folders)
- Edit Folder
 - Create Folder
 - [Custom Folders]
 - Keyword
 - Folder Name
 - Ringer Type
 - Erase Folder Erase selected folder & msgs. Yes/No
 - Exit
- Erase All Msgs Erase All? Yes/No

Scheduler

- Current Week's or Month's Calendar (Press **OK**)
- [Scheduler Events]
- Add Event
 - Contents
 - Done
 - AM/PM
 - Ringer Type
 - Edit Alarm
 - Edit Repeat
 - Cancel
- Erase Event(s)
- Today

Week View	
Month View	
Purge	Erase all items before this time? Yes/No
Purge All Information (Help)	All events will be erased. Are you sure? Yes/No
Settings	
Sounds	
Audio Volume	
Ringer	High+Vibrate/High/Medium High/Medium Low/Low/Vibrate/Off
Key Beep	High/Medium High/Medium Low/Low/Off
Earpiece	High/Medium High/Medium Low/Low
PWR On/Off	High/Medium High/Medium Low/Low/Off
Ringer Type	
Voice Calls	With Caller ID/No Caller ID/Roaming
Messages	
Voicemail	
Page/Text	
Tone Length	Short/Long
Alert	
Service Change	On/Off
Messages	On/Off
Minute Beep	On/Off
Call Connect	On/Off
Silent Mode	On/Off
Display	
Backlight	8 Seconds/15 Seconds/30 Seconds/Off/Always On
Greeting	Keep/Change
Screen Saver	
Images	
Item 1	View/Assign
Item 2	View/Assign
Item 3	View/Assign
On/Off	On/Off
Contrast	High/Medium High/Medium/Medium Low/Low
Language	English/Spanish
Version	S/W / PRL
Security	(Enter Lock Code)
Lock Phone	Unlocked/On Power Up/Lock Now
Change Lock Code	
Special #s	
Erase PhoneBook	
Reset Phone	
Setup	
Anykey Answer	On/Off
Car Auto-Answer	Off/Car Kit
Roaming	
Set Mode	
Network	
Automatic	

Call Guard Extra Step Required to make or take Roam Calls
On/Off

Calculator



Games

Comanche
Black Jack 2
Game Options
BackLight On/Off

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation and numbers whenever you are prompted to enter text (for example, when adding an Internal Phone Book entry).

To change the character input mode:

1. When you display a screen where you can enter text, highlight **Mode** and press .
2. To select a character input mode, highlight it and press .
 - ▶ **Abc** to enter characters by tapping the keypad (see page 30).
 - ▶ **SYM** to enter symbols (see page 30).
 - ▶ **123** to enter numbers (see page 30).

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Abc** mode. (See “Selecting a Character Input Mode” on page 29.) Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

- ▶ **1** . @ / ? , ' & - () \ : 1
- ▶ **2** ABC 2
- ▶ **3** DEF 3
- ▶ **4** GHI 4
- ▶ **5** JKL 5
- ▶ **6** MNO 6
- ▶ **7** PQRS 7
- ▶ **8** TUV 8
- ▶ **9** WXYZ 9
- ▶ **0** 0
- ▶ **#** Space
- ▶ ***** Shift

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

Entering Symbols and Numbers

To enter symbols, select the **SYM** mode. (See “Selecting a Character Input Mode” on page 29.) To enter a symbol, press the appropriate key indicated on the display.

To enter numbers, select the **123** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 29.)

6

Using Service Features

In This Section

- ▶ Using Caller ID
 - ▶ Responding to Call Waiting
 - ▶ Three-Way Calling
 - ▶ Forwarding Your Calls
-

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you through the calling features that enhance your service. Using these features will help you make the most of your service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. Similarly, if you call someone who has this feature, your phone number displays on their phone. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number.

To block your phone number from being displayed for a specific outgoing call:

1. Press *** 6 7**.
2. Enter the number you want to call.
3. Press **OK** (or highlight **Roam Call** and press **OK**).

To permanently block your number, call your wireless service provider.

Responding to Call Waiting

Call Waiting alerts you to incoming calls while you're on a call by sounding two beeps. The display screen informs you that a call is coming in and shows the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Highlight **Flash** and press **OK**. This puts the first caller on hold and answers the second call.
- ▶ To switch back to the first caller, highlight **Flash** and press **OK** again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing *** 7 0** before placing your call. Call Waiting is automatically reactivated once you end the call.

Three-Way Calling

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **OK**.
2. Once you have established the connection, highlight **Dial 3-Way Call** and press **OK** to put the first caller on hold.
3. Dial the second number you wish to call and press **OK**.
4. When you're connected to the second party, highlight **Flash** and press **OK** once more to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call by displaying a phone number stored in your Internal Phone Book or Call History. To call the third party, highlight **3-Way Call** and press **OK**.

Note: Call Waiting and Three-Way Calling are not available while roaming off the network available to you.

Forwarding Your Calls

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding

1. Press *** 7 2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **OK**. You will hear two sets of two short dial tones to confirm the activation of Call Forwarding.

To Deactivate Call Forwarding

1. Press *** 7 2 0**.
2. Press **OK**. You will hear two sets of two short dial tones to confirm the deactivation.

Note: You are charged a higher rate for calls you have forwarded.

7

Managing Messaging

In This Section

- ▶ Knowing When You Have Messages
 - ▶ Message Types
 - ▶ New Message Alerts
 - ▶ Message Options
 - ▶ And More
-


 
Your phone is always working to help you stay connected – even when you're unavailable. With two types of messaging, you can depend on being notified of important information. This section steps you through the messaging functions available on your phone.

Setting Up Voicemail

The first thing you'll want to do after activating your phone is set up your voicemail (see page 4 for instructions).

Knowing When You Have Messages

There are several ways your phone alerts you:




- ▶ By displaying a message on the screen.
- ▶ By sounding the assigned ringer type.
- ▶ By the LED blinking red.
- ▶ By displaying  at the top of your screen for voicemail messages or  for page/text messages.


Message Types

There are two types of messaging features available from your phone's menu. You can receive voicemail and page/text messages as long as your phone has enough memory locations to store them.

- ▶ **Voicemail** automatically captures calls when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone when you have new voice messages and an asterisk is displayed in front of the **Voicemail** message option.
- ▶ **Page/Text Messages** include numeric pages and text messages.

New Voicemail Message Alerts

When you receive a new voicemail message, your phone alerts you and prompts you to call your voicemail box. To call your voicemail box, press . To display your Missed Log, press  or .

Important: When you are roaming off the network available to you, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your phone number. When your voicemail box answers, press  and enter your pass code.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a network service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your phone or any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail box or use the menu keys.

Using One-Touch Message Access:


- ▶ Press and hold . Follow the system prompts.

Using the Menu Keys on Your Phone to Access Your Messages:

1. From the main menu, highlight **Messages** and press .
2. Highlight **Voicemail** and press .
3. Highlight **Call Voicemail** and press .

Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.

Using a Phone Other Than Your Wireless Phone to Access Your Messages:





1. Dial your wireless phone number.
2. When your voicemail box answers, press .
3. Enter your pass code.

Voicemail Box Options

Your phone offers several options for organizing and accessing your voicemail box.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold  to access your voicemail.
2. Following the system prompts, press  to change your Personal Options.
3. Press  for Administrative Options.
4. Press  for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename or delete group lists.

Clearing the Message Icon

Your phone may temporarily continue to display the icon after you have checked your messages.

To clear the icon from the display screen:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Voicemail** and press **OK**.
3. Highlight **Clear Count** and press **OK**.
4. Highlight **Yes** and press **OK**.

Page/Text Messages

Numeric Pages

Callers can send a numeric page to your phone when they reach your voicemail box. Numeric paging to your phone comes at no additional charge.

Note: The numeric paging option for your phone must be turned on for your phone to receive pages. This option can be set by entering your voicemail feature options.

Text Messages

When you receive a new text message, your phone alerts you and displays the message.

- ▶ Press **OK** to display message options.
- ▶ Press **END** or **CLR** to clear the alert.

Text Message Storage

Your phone can store up to 50 text messages. When the message memory is 90% full, a warning displays in the messages menu. When your phone reaches its text message capacity, it automatically deletes the oldest messages as new messages arrive.

Note: Unread and locked messages will not be automatically deleted when text messages capacity has been reached. If your phone has a combined 50 unread and locked messages, any new text messages will be returned without notification.

Displaying Text Messages

To display a text message from the message notification alert, see “Text Messages” on page 38.

To display a text message from the main menu:

1. Highlight **Messages** and press **OK**.
2. Highlight **Page/Text** or the custom folder that contains your message and press **OK**. (Folders that contain unread messages have an asterisk (*) before them.)
3. Messages are displayed in the order they are received. Messages you have read have a checkmark before them. To display a message, highlight it and press **OK**.

Managing Call History

In This Section

- ▶ Viewing Call History (Incoming, Outgoing and Missed)
 - ▶ Call History Options
 - ▶ Making a Call From Call History
 - ▶ Saving a Phone Number From Call History
 - ▶ Prepending a Phone Number From Call History
 - ▶ Erasing Call History
-

The Call History helps you manage your time more effectively. It keeps track of incoming calls, calls made from your phone and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing Call History (Incoming, Outgoing and Missed)

You'll find your Call History invaluable. It is a list of the last 10 phone numbers or Internal Phone Book entries for calls you placed, accepted or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. Highlight the Call History entry you wish to view and press **OK**.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press **OK**. This feature gives you the option of selecting:

- ▶ **Call** to dial the phone number.
- ▶ **Phonebook Info.** to display the Internal Phone Book entry (if the sender's phone number is in your Internal Phone Book).
– or –
- ▶ **Save** to save the sender's phone number if it is not already in your Internal Phone Book. (See "Saving a Phone Number From Call History" on page 43.)
- ▶ **Time/Date** to see the time and date of the selected call.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 44.)

- ▶ **Erase** to delete the entry.
- ▶ **Next** to display the next entry.
- ▶ **Previous** to display the previous entry.

Tip: You can also view the next Call History entry by pressing the 4-way navigator right or view the previous entry by pressing the 4-way navigator left.

Making a Call From Call History

To place a call from Call History:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. Highlight the Call History entry that contains the number you wish to call and press **OK**.
4. Press **OK** to display the entry, then press **OK** again to dial the phone number.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted. Calls labeled Data or Fax can only be dialed through a personal computer.

Saving a Phone Number From Call History

Your phone can store up to 99 Internal Phone Book entries. Phone Book entries can store up to a total of five phone numbers and each entry's name can contain sixteen characters.

To save a phone number from Call History:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. Highlight the phone number you wish to save and press **OK**.
4. Highlight **Save** and press **OK**.

Note: You cannot save phone numbers already in your Internal Phone Book or from calls identified as No ID or Restricted.

5. Highlight a label for the entry and press **OK**.
6. Enter a name for the entry and press **OK**. (See “Selecting a Character Input Mode” on page 29.) (You may also highlight an existing entry’s name and press **OK**, provided there is no number using the same label and that there are fewer than five numbers currently stored for that entry.)
7. To select an option, highlight it and press **OK**.
 - ▶ **Done** to save the entry.
 - ▶ **Set Speed Dial** to save the phone number in a speed dial location. Highlight an available location and press **OK**. (See “Using One-Touch/Two-Touch Speed Dialing” on page 23.)

After you have saved the number, the new Internal Phone Book entry is displayed. (See “Internal Phone Book Entry Options” on page 48.)

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. Highlight the entry you wish to call and press **OK**.
4. Highlight **Prepend** and press **OK**.
5. Enter the digits or pauses (see below) you wish to add to the number. If you want to save the number, select the **Save** option. If not, the changes apply only for the current call.
6. To select an option, highlight it and press **OK**.
 - ▶ **Call** to dial the phone number.
 - ▶ **Save** to save the phone number in your Internal Phone Book.

- ▶ **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 22.)
- ▶ **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses on page 22.)
- ▶ **Exit** to return to the previous screen.

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 42.

To erase Call History:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Erase Calls** and press **OK**.
3. Highlight **Outgoing Calls**, **Incoming Calls**, **Incoming Calls or All Calls** and press **OK**.
4. Highlight **Yes** and press **OK**.

Using Your Internal Phone Book

In This Section

- ▶ Adding a New Internal Phone Book Entry
 - ▶ Internal Phone Book Entry Options
 - ▶ Finding Internal Phone Book Entries
 - ▶ Editing Internal Phone Book Entries
 - ▶ Selecting a Ringer Type
 - ▶ And More
-

Now you know the basics that help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more efficiently when you are trying to connect with the important people in your life.

Adding a New Internal Phone Book Entry

Your phone can store up to 99 Internal Phone Book entries. Phone Book entries can store up to a total of five phone numbers and the entry's name can contain sixteen characters.

To add a new entry:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Add New Entry** and press **OK**.
3. Enter a name for the entry or highlight **Save w/o Name** and press **OK**. (See "Selecting a Character Input Mode" on page 29.)
4. Enter a phone number and press **OK**.
5. Highlight a label for the entry and press **OK**.
6. To select an option, highlight it and press **OK**.
 - ▶ **Done** to save the entry.
 - ▶ **Set Speed Dial** to save the number in a speed dial location. Highlight a location and press **OK**. (See "Using One-Touch/Two-Touch Speed Dialing" on page 23.)

After you have saved the number, the new Internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on this page.)

Internal Phone Book Entry Options

When you display an Internal Phone Book entry, the following options are displayed. To select an option, highlight it and press **OK**.

- ▶ **Call** to dial the phone number. (If you are roaming and have Call Guard activated, select **Roam Call**. See "Call Guard" on page 14.)
- ▶ **[Additional Phone Numbers]** to display alternate phone numbers (if the entry has more than one phone number).
- ▶ **Add Phone #** to add a phone number to the entry. (See "Adding a Phone Number to an Internal Phone Book Entry" on page 50.)
- ▶ **Edit Number** to change the entry's phone number or speed dial location. (See "Editing an Internal Phone Book Entry's Phone Number" on page 51.)

- ▶ **Edit Entry** to change the entry's default number, ringer type, name, e-mail or secret mode. (See "Editing an Internal Phone Book Entry" on page 51.)
- ▶ **View E-Mail** to display the entry's e-mail address, if applicable. (See "Editing an Internal Phone Book Entry" on page 51.)
- ▶ **Erase Number** to delete one of an entry's alternate phone numbers. (You must first select the number by highlighting it and pressing **OK**.) You cannot delete an entry's default phone number.
- ▶ **Erase Entry** to delete the entry and all its information.

Tip: You can view the next entry by pressing the 4-way navigator right or view the previous entry by pressing the 4-way navigator left.

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

Finding Names





You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Highlight **Phone Book** and press **OK**.
2. Highlight **Find Name** and press **OK**.
3. Scroll through the Internal Phone Book entries by pressing the 4-way navigator up or down. To find a specific entry, enter the first letter of the name or part of the name (such as "ave" for "Dave"). The more letters you enter, the narrower your search becomes.
4. To display an entry, highlight it and press **OK**.
5. To dial the entry's default phone number, press **OK** again. To display additional Internal Phone Book entries, press the 4-way navigator left or right.

Shortcut: From the main menu, press the 4-way navigator to the left to display the Find Name feature.




Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:



1. Highlight **Phone Book** and press .
2. Highlight **Find Speed Dial** and press .
3. Speed dial numbers are displayed in numerical order. Scroll through speed dial entries by pressing the 4-way navigator up or down. You may also enter the number of a speed dial location using your keypad.
4. To display an entry, highlight it and press .
5. To dial the entry's default phone number, press  again. To display additional Internal Phone Book entries, press the 4-way navigator left or right.

Adding a Phone Number to an Internal Phone Book Entry

To add a phone number to an entry:




1. Display an Internal Phone Book entry.
2. Highlight **Add Phone #** and press .
3. Enter the phone number and press .
4. Highlight a label for the number and press .

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

5. To select an option, highlight it and press .
- ▶ **Done** to save the entry.
 - ▶ **Set Speed Dial** to save the phone number in a speed dial location. Highlight a location and press . (See “Using One-Touch/Two-Touch Speed Dialing” on page 23.)





Editing an Internal Phone Book Entry's Phone Number

To edit an entry's phone number:

1. Display an Internal Phone Book entry.
 2. Highlight **Edit Number** and press .
 3. To select an option, highlight it and press .
- ▶ **Edit Number** to change the entry's phone number and label.
 - ▶ **Set Speed Dial** to save the phone number in a speed dial location. Highlight a location and press . (See “Using One-Touch/Two-Touch Speed Dialing” on page 23.)
 - or –
 - ▶ **Erase Speed Dial** to delete the number from a speed dial location.

Editing an Internal Phone Book Entry




To make changes to an entry:

1. Display an Internal Phone Book entry.
 2. Highlight **Edit Entry** and press .
 3. To select an option, highlight it and press .
- ▶ **Set Default #** to change the entry's default number. Highlight a number and press .
 - ▶ **Ringer Type** to select a ringer type to play when you receive a call from the entry. Highlight a ringer type and press .
 - ▶ **Name** to change the entry's name. (See “Selecting a Character Input Mode” on page 29.)
 - ▶ **E-Mail** to add an e-mail address to the entry. (See “Selecting a Character Input Mode” on page 29.)
 - ▶ **Secret Mode** to change the entry's secret mode status. (See “Secret Internal Phone Book Entries” on page 52.)

Selecting a Ringer Type for an Entry

You can assign a ringer type to an Internal Phone Book entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 54.)




To select a ringer type for an entry:

1. Display an Internal Phone Book entry.
2. Highlight **Edit Entry** and press .
3. Highlight **Ringer Type** and press .
4. Highlight a ringer type and press . (You will hear a preview of the ringer type when you highlight it.)




Secret Internal Phone Book Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced by “(SECRET)”.

To make an entry secret:

1. Display an Internal Phone Book entry.
2. Highlight **Edit Entry** and press .
3. Highlight **Secret Mode** and press .
4. Highlight **Yes** and press .

To make an entry public:

1. Display an Internal Phone Book entry.
2. Highlight **Edit Entry** and press .
3. Enter your lock code.
4. Highlight **Secret Mode** and press .
5. Highlight **No** and press .

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or phone number or try 0000. If none of these work, call your wireless service provider.

10

Changing Your Phone's Settings






In This Section

- ▶ Adjusting Volume
 - ▶ Selecting Ringer Types
 - ▶ Changing the Greeting
 - ▶ Changing Display Settings
 - ▶ Call Answering Options
 - ▶ And More
-

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and add or adjust the settings that are right for you.

Adjusting the Phone's Volume Settings

To adjust the ringer, key beep or earpiece volume:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Audio Volume** and press .
4. Select **Ringer, Key Beep, Earpiece** or **PWR On/Off** and press .
5. Highlight a volume setting and press .

Tip: You can adjust the ringer volume in Standby mode or the earpiece volume during a call by using the volume keys on the side of your phone.

Ringer Types







Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Phone Book entries, types of calls and types of messages.

- ▶ **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- ▶ **Vibrating Ringer** alerts you to calls or messages without disturbing others.

Selecting Ringer Types for Voice Calls







Your phone provides a variety of ringer options which allow you to customize your ring and volume settings.

To select a ringer type for voice calls so you recognize when a certain type of call is coming in by the ringer:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Ringer Type** and press .
4. Highlight **Voice Calls** and press .
5. Highlight **With Caller ID, No Caller ID** or **Roaming** and press .
6. Highlight a ringer type and press . You will hear a preview of the ringer type when you highlight it.

Selecting Ringer Types for Messages





To select a ringer type for messages:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Ringer Type** and press .
4. Highlight **Messages** and press .
5. Highlight **Voicemail** or **Page/Text** and press .
6. Highlight a ringer type and press . You will hear a preview of the ringer type when you highlight it.

Selecting a Tone Length






Longer tone lengths may be better for tone recognitions when dialing voicemail or other automated systems.

To select a tone length:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Tone Length** and press .
4. Highlight **Short** or **Long** and press .

Alert Notification





To enable or disable alert sounds:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Alert** and press .
4. Select a feature by highlighting it and press .
 - ▶ **Service Change** to alert you when you exit or enter your wireless network.
 - ▶ **Messages** to alert you when you receive a voicemail, page or text message.
 - ▶ **Minute Beep** to hear a beep once a minute when you are on a call. (The beep is not audible to the other party.)
 - ▶ **Call Connect** to alert you when your outgoing call has been connected.
5. Highlight **On** or **Off** and press .

Silent Mode

There may be times when you need to silence your phone entirely. The phone's Silent Mode allows you to mute all sounds without turning your phone off.

To change your phone's Silent Mode:





1. From the main menu, highlight **Settings** and press .
2. Highlight **Sounds** and press .
3. Highlight **Silent Mode** and press .
4. Highlight **On** or **Off** and press .

Tip: You can also activate Silent Mode by pressing and holding the volume down key in Standby mode. To deactivate Silent Mode, press and hold the volume up key.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:






1. From the main menu, highlight **Settings** and press .
2. Highlight **Display** and press .
3. Highlight **Backlight** and press .
4. Highlight **8 Seconds**, **15 Seconds**, **30 Seconds**, **Off** or **Always On** and press .

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Greeting

The greeting can be up to eleven characters and is displayed on the first line of your phone's display screen in standby mode.

To change your greeting:

1. From the main menu, highlight **Settings** and press .
2. Highlight **Display** and press .
3. Highlight **Greeting** and press .
4. Highlight **Change** and press .
5. Enter your new greeting text. (See "Selecting a Character Input Mode" on page 29.)
6. Highlight **Save** and press .

Screen Saver

Your new phone offers you the option of displaying a Screen Saver while in Standby mode.

To assign an image for Screen Saver mode:

1. From the main menu, highlight **Settings** and press **OK**.
 2. Highlight **Display** and press **OK**.
 3. Highlight **Screen Saver** and press **OK**.
 4. Highlight **Images** and press **OK**.
 5. Highlight **Item 1**, **Item 2** or **Item 3** and press **OK**.
 6. To select an option, highlight it and press **OK**.
- ▶ **View** to see a preview of the screen saver. (Press **OK** or **CLR** to return to the options menu.)
 - ▶ **Assign** to assign the selected screen saver.

To activate or deactivate Screen Saver mode:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Display** and press **OK**.
3. Highlight **Screen Saver** and press **OK**.
4. Highlight **On/Off** and press **OK**.
5. Highlight **On** or **Off** and press **OK**.

Changing the Contrast

To adjust the contrast on the phone's display:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Display** and press **OK**.
3. Highlight **Contrast** and press **OK**.
4. Highlight **High**, **Medium High**, **Medium Low** or **Low** and press **OK**.

Selecting a Language

To select the language in which your phone displays menu items:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Display** and press **OK**.
3. Highlight **Language** and press **OK**.
4. Highlight **English** or **Spanish** and press **OK**.

Security Settings

For information on your phone's security settings, see Section 11: Setting Your Phone's Security on page 61.

Selecting a Call Answer Mode

To answer calls by opening the phone or by pressing any key when open:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Setup** and press **OK**.
3. Highlight **Anykey Answer** and press **OK**.
4. Highlight **On** or **Off** and press **OK**.
 - ▶ **On** allows you to answer the phone by opening the flip or by pressing any key when the flip is already open.
 - ▶ **Off** allows you to answer calls only by pressing **OK**.

Selecting an Auto Answer Mode

To answer calls when your phone is connected to an optional Hands-Free Car Kit:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Setup** and press **OK**.
3. Highlight **Car Auto-Answer** and press **OK**.
4. To select an option, highlight it and press **OK**.
 - ▶ **Off** to answer the phone using normal operation when it is connected to a Hands-Free Car Kit.
 - ▶ **Car Kit** to answer calls automatically after three rings when it is connected to a Hands-Free Car Kit. Remember, your phone will answer calls in Car Kit mode even if you are not present.

TTY Access

ATTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

For information on enabling this phone's built-in TTY Mode, please contact your wireless service provider.

Note: If TTY Mode is enabled, a TTY device must be in use for the phone to function properly.

11

Setting Your Phone's Security

In This Section

- ▶ Accessing the Security Menu
- ▶ Locking Your Phone
- ▶ Unlocking Your Phone
- ▶ Using Special Numbers
- ▶ And More

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu.

To access the Security menu:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Security** and press **OK**.
3. Enter your lock code.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or phone number or try 0000. If none of these work, call your wireless service provider.

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers.

To lock your phone:

1. From the Security menu, highlight **Lock Phone** and press **OK**.
(See "Accessing the Security Menu" on this page.)
2. Highlight **Lock Now** and press **OK**.

Unlocking Your Phone

To unlock your phone:

1. Highlight **Unlock** and press **OK**.
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security menu, highlight **Change Lock** and press **OK**.
(See "Accessing the Security Menu" on this page.)
2. Enter your new lock code.
3. Re-enter your new lock code.

Calling in Lock Mode

When your phone is in lock mode, you may place calls only to 911 or your special numbers.

To place a 911 emergency call while your phone is in lock mode:

- ▶ Dial **9 1 1** and press **OK** (or highlight **Call 911** and press **OK**).

To place a call to a special number while your phone is in lock mode:
(See "Using Special Numbers" on this page.)

- ▶ Enter the phone number and press **OK**.

Using Special Numbers

You can save four special numbers in addition to your Internal Phone Book entries (the same number may be in both directories). You can make and receive calls from special numbers even when your phone is locked.
(See "Calling in Lock Mode" on this page.)

To add or replace a special number:

1. From the Security menu, highlight **Special #s** and press **OK**.
(See "Accessing the Security Menu" on page 62.)
2. Highlight an entry location and press **OK**.
3. Enter or replace the special number.
4. Highlight **OK** and press **OK**.

Note: There are no Speed Dial options associated with special numbers.

Erasing Special Numbers

To erase a special number:

1. From the Security menu, highlight **Special #s** and press **OK** .
(See “Accessing the Security Menu” on page 62.)
2. Highlight the number you wish to erase and press **OK** .
3. Press and hold **CLR** to erase the number.
4. Highlight **OK** and press **OK** .

Erasing the Internal Phone Book

To erase all the names and phone numbers in your Internal Phone Book:

1. From the Security menu, highlight **Erase PhoneBook** and press **OK** .
(See “Accessing the Security Menu” on page 62.)
2. Highlight **Yes** and press **OK** .

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Internal Phone Book, Call History, Scheduler and Messages are not affected.

To reset your phone:

1. From the Security menu, highlight **Reset Phone** and press **OK** .
(See “Accessing the Security Menu” on page 62.)
2. If you are certain you wish to reset your phone, highlight **Yes** and press **OK** .

12

Using Your Scheduler

In This Section

- ▶ Adding an Event to the Scheduler
- ▶ Event Alerts
- ▶ Viewing Events and Event Options
- ▶ Using the Calculator
- ▶ Playing Games
- ▶ And More

Your phone has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level.

Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Highlight the day to which you want to add a scheduled event by pressing the 4-way navigator left (previous day) or right (next day) and press **OK**.

Tip: Press the 4-way navigator up or down to scroll by week through the Scheduler calendar or ***** and **#** to scroll by year.

3. Highlight **Add Event** and press **OK**.
4. Enter a title and press **OK**. (See “Selecting a Character Input Mode” on page 29.)
5. Enter the time and date of the event (which is displayed at the top of the display screen) using your keypad. To toggle between AM and PM, highlight **AM/PM** and press **OK**.
6. To select an option, highlight it and press **OK**.
 - ▶ **Ringer Type** to select a ringer to play when an alarm is scheduled for the event. To select a ringer type, highlight it and press **OK**. You will hear a preview of the ringer type when you highlight it.
 - ▶ **Edit Alarm** to schedule the event’s alarm (the default is **10 Min. Before**). To select an alarm time, highlight it and press **OK**.
 - ▶ **Edit Repeat** to schedule the event’s repeating frequency (the default is **No Repeat**). To select a repeating frequency, highlight it and press **OK**.
7. To schedule the event, highlight **Done** and press **OK**.

Event Alerts

There are several ways your phone alerts you of scheduled events:

- ▶ By playing the assigned ringer type.
- ▶ By illuminating the backlight.

- ▶ By flashing the LED.
- ▶ By displaying the event’s description, time and date.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

- ▶ **OK** to clear the alarm.
- ▶ **View Detail** to display the event’s time, date, description, alarm and repeating status.
- ▶ **Snooze** to repeat the alarm in five minutes.
- ▶ **Erase** to delete the event.

Viewing Events and Event Options

To view your scheduled events:

1. From the main menu, highlight **Scheduler** and press **OK**.
In the Week View, the number of events is displayed under days with events scheduled. In the Month View, days with events scheduled are underlined.
2. To view an individual day, highlight the day by pressing the 4-way navigator left (previous day) or right (next day) and press **OK**. If you have events scheduled, they are displayed in chronological order before the Scheduler menu options.
3. To display an event listed in the Scheduler menu, highlight it and press **OK**.
4. To display event options, press **OK** again. To select an option, highlight it and press **OK**.
 - ▶ **View Detail** to display the event’s date, time, alarm, repeating status and title.
 - ▶ **Erase** to delete the event. Highlight **Yes** and press **OK** to confirm that you wish to delete the event.
 - ▶ **Edit Content** to change the event’s title. (See “Editing an Event’s Title” on page 69.)

- ▶ **Change Settings** to edit the event's settings. (See "Editing an Event's Ringer Type" on page 70.)
- ▶ **(Help)** to display event help text.
- ▶ **Next Event** to display the next event.
- ▶ **Prev Event** to display the previous event.

Erasing a Day's Events

To erase a scheduled day's events:

1. From the Scheduler menu, highlight **Erase Event(s)** and press **OK**.
2. To delete the events scheduled for that day (the date is displayed at the top of the screen), highlight **Yes** and press **OK**.

Note: If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "This will erase all repeating occurrences of this event(s)." Press **OK**. If you do not wish to erase all occurrences of the repeating event, highlight **No** and press **OK**. To erase the day's non-repeating events, access each event through the Scheduler menu and erase it individually.

Going to Today's Scheduler Menu

If you are viewing the Scheduler menu and wish to go to the Scheduler menu for today's date:

- ▶ From the Scheduler menu, highlight **Today** and press **OK**.

Displaying the Week or Month View

If you are viewing the Scheduler menu and wish to display the week or month that contains the current selected day:

- ▶ From the Scheduler menu, highlight **Week View** or **Month View** and press **OK**. The setting is saved the next time you display your Scheduler.

Purging Events

To delete events scheduled before a specific time and date:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to access the Scheduler menu.
3. Highlight **Purge** and press **OK**.
4. Use your keypad to enter the time and date prior to which you wish to erase scheduled events (the default is the current time and date).
5. Highlight **Yes** and press **OK**.

Note: If the period for which you are purging contains a repeating event, all future occurrences of the event will also be purged.

Purging All Events

To delete all scheduled events:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to access the Scheduler menu.
3. Highlight **Purge All** and press **OK**.
4. If you are certain you wish to erase all events from the Scheduler, highlight **Yes** and press **OK**.

Editing an Event's Title

To change an event's title:

1. From the Scheduler menu, highlight an event and press **OK**.
2. Press **OK** again to display event options.
3. Highlight **Edit Content** and press **OK**.
4. Enter a new title and press **OK**. (See "Selecting a Character Input Mode" on page 29.)
5. To save the new title, highlight **Done** and press **OK**.

Editing an Event's Ringer Type

To change an event's ringer type:

1. From the Scheduler menu, highlight an event and press **OK**.
2. Press **OK** again to display event options.
3. Highlight **Change Settings** and press **OK**.
4. Highlight **Ringer Type** and press **OK**.
5. To select a new ringer type, highlight it and press **OK**. You will hear a preview of the ringer type when you highlight it.

Editing an Event's Alarm

To change an event's alarm time:

1. From the Scheduler menu, highlight an event and press **OK**.
2. Press **OK** again to display event options.
3. Highlight **Change Settings** and press **OK**.
4. Highlight **Edit Alarm** and press **OK**.
5. To select an option, highlight it and press **OK**.
 - ▶ **On Time** to schedule the alarm at the time of the event.
 - ▶ **10 Min. Before** to schedule the alarm ten minutes before the event.
 - ▶ **30 Min. Before** to schedule the alarm thirty minutes before the event.
 - ▶ **1 Hour Before** to schedule the alarm an hour before the event.
 - ▶ **No Alarm** for no alarm to be scheduled before the event.
6. To schedule the event, highlight **Done** and press **OK**.

Editing an Event's Repeating Status

To edit an event's repeating status:

1. From the Scheduler menu, highlight an event and press **OK**.
2. Press **OK** again to display event options.

3. Highlight **Change Settings** and press **OK**.
4. Highlight **Edit Repeat** and press **OK**.
5. To select an option, highlight it and press **OK**.
 - ▶ **No Repeat** to schedule the event for one time only.
 - ▶ **Daily** to repeat the event at the same time every day.
 - ▶ **Weekly** to repeat the event every week.
 - ▶ **Monthly** to repeat the event every month.
 - ▶ **Yearly** to repeat the event every year.
6. To schedule the event, highlight **Done** and press **OK**.

Viewing Scheduler Memory Space

To view available and used scheduler memory space:

- ▶ From the Scheduler menu, highlight **Information** and press **OK**.




Using the Calculator

Your phone comes with a built-in calculator function. To use this feature, follow these easy steps:




1. From the main menu, highlight **Calculator** and press **OK**.
2. Enter numbers using your keypad. Press **#** to enter a decimal point.
3. Mathematical functions may be assigned using the 4-way navigator. The display screen shows a diagram of the location of the functions. Press ***** (shift) to display additional functions.
4. Press **OK** to complete your calculation.

Playing Games

To play a game on your phone:

1. From the main menu, highlight **Games** and press .
2. Highlight **Comanche** or **Black Jack 2** and press .
3. Press  to display game instructions.

To adjust the backlight settings for games:

1. From the main menu, highlight **Games** and press .
2. Highlight **Game Options** and press . Press  again to enter the **BackLight** options menu.
3. Highlight **On** or **Off** to set the backlight display. This setting will apply to game mode only.

13

Knowing Performance and Safety Guidelines

In This Section

- ▶ Getting the Most Out of Your Reception
 - ▶ Maintaining Safe Use of and Access to Your Phone
 - ▶ Caring for the Battery
 - ▶ Acknowledging Special Precautions and the FCC Notice
 - ▶ Owner's Record
-

Part of getting the most out of your phone is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality that your phone was designed to give you.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to Standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ Hold the phone with the antenna raised, fully-extended and over your shoulder.
- ▶ Try not to hold, bend or twist the phone's antenna.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the mouthpiece.
- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to your wireless service provider.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.
- ▶ Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.

- ▶ Dial **9 1 1** to report serious emergencies. It's free from your wireless phone.
- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Tip: Purchase an optional Hands-Free Car Kit.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations.
- ▶ Below deck on boats.
- ▶ Fuel or chemical transfer or storage facilities.
- ▶ Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- ▶ Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
4° F to 140° F (-20° C to 60° C)
 - More than one month:
4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your wireless service provider

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking LiIon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure that the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone

emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the 1010 are:

PCS mode (Part 24E) - Head: 1.240 W/kg; Body-worn: 0.766 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines. FCC ID number: BEJSP3100. More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/fccid>.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: LG 1010

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Index

A

- Alert Notification 56
- Answering Calls 16
- Anykey Answer 60

B

- Battery
 - Capacity 9
 - Charging 10
 - Installing 9
 - Protecting 78
 - Removing 9

C

- Calculator 71
- Call Answer Mode 60
- Call Forwarding 34
- Call Guard 14
- Call History
 - Erasing 45
 - Making a Call From 43
 - Options 42
 - Viewing 42
- Call Waiting 32
- Caller ID 32
- Car Auto-Answer Mode 60

D

- Desktop Charger 10
- Dialing Options 18
- Dialing Phone Numbers With Pauses 22
- Display
 - Backlight 57
 - Contrast 59
 - Greeting 57
 - Language 59
- Display Pictures
 - Screen Saver 58
- Display Screen 8

E

- Emergency Numbers 23
- Entering Characters
 - ABC Mode/Tapping the Keypad 30
 - Character Input Mode 29

F

- FCC Notice 79
- Four-Digit Calling 22

G

- Games 72

I

- Internal Phone Book
 - Adding a New Entry 48
 - Dialing From the Internal Phone Book 23
 - Finding a Phone Number 21
 - Saving a Phone Number 20
 - Secret Entries 52

L

- Lock Code
 - Changing 62
- Locking Your Phone 62

M

- Making Calls 16
- Menu Diagram 27
- Menu Navigation 26
- Missed Call Notification 18

N

- Numeric Pages 38

P

- Prepending Phone Numbers
 - From Call History 44

R

- Resetting Your Phone 64
- Ringer Types
 - Messages 55
 - Scheduler Events 70
 - Voice Calls 54

- Roaming
 - Other Digital Networks 12
 - Roam Mode 13

S

- Scheduler
 - Adding an Event 66
 - Event Alerts 66
 - Today's Scheduler Menu 68
 - Viewing Events 67
- Screen Saver 58
- Security Menu 62
- Silent Mode 56
- Special Numbers 63
- Speed Dialing 23

T

- Text Messages
 - Displaying 39
 - Storage 38
- Three-Way Calling 33
- TTY Access 60

U

- Unlocking Your Phone 62

V

- Vicemail
 - Clearing the Icon 38
 - Retrieving 37
- Vicemail Box Options 37
 - Group Distribution Lists 37
- Volume
 - Conversation 17
 - Ringer 17