



LG

Life's Good

Rumor2 by LG® User Guide

Table of Contents

Introduction	.i
Your Phone's Menu	.ii
Getting Started	.1
Setting Up Service	.2
Getting Started	.3
Setting Up Your Voicemail	.4
Getting Help	.5
Your Phone	.7
Your Phone: The Basics	.8
Front View of Your Phone	.9
Viewing the Display Screen	.14
Features of Your Phone	.17
Turning Your Phone On and Off	.20
Using Your Phone's Battery and Charger	.21
Navigating Through Phone Menus	.25
Displaying Your Phone Number	.26
Making and Answering Calls	.27
Entering Text	.39
Controlling Your Phone's Settings	.46
Sound Settings	.47

Display Settings	52
Location Settings	57
Messages Settings	58
Airplane/Music Mode	61
TTY Use	62
Phone Setup Options	64
Setting Your Phone's Security	68
Accessing the Security Menu	68
Using Your Phone's Lock Feature	69
Using Special Numbers	70
Erasing Phone Content	71
Resetting Your Picture Messaging Account	72
Resetting Default Settings	73
Resetting Your Phone	74
Controlling Your Roaming Experience	76
Understanding Roaming	77
Setting Your Phone's Roam Mode	79
Using Call Guard	80
Using Data Roam Guard	82
Managing History	83
Viewing History	84
History Options	85
Making a Call From History	86
Viewing History Thread	86

Saving a Phone Number From History	87
Prepend a Phone Number From History	88
Erasing History	89
Using Contacts	90
Adding a New Contact Entry	91
Finding Contact Entries	92
Contact Entry Options	93
Adding a Phone Number to a Contact Entry	94
Editing a Contact Entry's Phone Number	95
Assigning Speed Dial Numbers	96
Send All Contacts	97
Editing a Contact Entry	98
Selecting a Ringer Type for an Entry	98
Dialing Services	99
Using the Phone's Calendar and Tools	100
Using Your Phone's Calendar	101
Using Your Phone's Alarm Clock	106
Using Your Phone's Notepad	107
Using Your Phone's Tools	108
Using Your Phone's Voice Services	111
Managing Voice Memos	112
Using the microSD Card	114
Using Your Phone's microSD Card and Adapter	115

microSD Settings	118
microSD Folders	119
Connecting Your Phone to Your Computer	120
Using the Built-in Camera	122
Taking Camera	123
Storing Pictures	129
Sending a Picture Message	134
Using Bluetooth	137
Turning Bluetooth On and Off	138
Using the Bluetooth Settings Menu	139
Bluetooth Profiles	142
Pairing Bluetooth Devices	144
Service Features	145
Service Features: The Basics	146
Using Voicemail	147
Using SMS Text Messaging	157
Using Caller ID	160
Responding to Call Waiting	161
Making a Three-Way Call	161
Using Call Forwarding	163
Data Services	164
Data Service Applications	165
Getting Started With Data Services	166

Downloading Content	172
Exploring the Web	174
Data Services FAQs	177
Music and Your Player	179
Using Music Manager	180
Playing Music on Your Phone	182
Safety and Warranty Information	183
Important Safety Information	184
General Precautions	185
Maintaining Safe Use of and Access to Your Phone	186
Using Your Phone With a Hearing Aid Device	188
Caring for the Battery	189
Radiofrequency (RF) Energy	191
Owner's Record	193
Phone Guide Proprietary Notice	193
Manufacturer's Warranty	194
Manufacturer's Warranty	195

Introduction

This **User Guide** introduces you to your wireless service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Your Phone's Menu

The following list outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 25.

Note: This outline is based on the Grid Menu Style. To switch between Grid and List Menu Styles, select **Menu > Settings > Display > Main Screen > Menu Styles**.

1. Web

2. Messages

- | | |
|----------------------|---|
| 1. Voicemail | 1. Call Voicemail / 2. Voicemail Details /
3. Clear Icon |
| 2. Send Message | 1. Text Message / 2. Picture Messaging |
| 3. Text Messages | |
| 4. Picture Messaging | 1. Inbox / 2. Sent Mail / 3. Saved Mail /
4. Pending Messages |
| 5. Settings | 1. Notification / 2. Callback Number /
3. Signature / 4. Preset Messages |

3. Bluetooth

1. Pair with Hands Free
2. Send a Contact
3. Send Files
4. Add a New...
5. Trusted Devices
6. More...

4. Contacts

5. Missed Alerts

6. History

7. Photos

1. Camera
2. Picture Messaging Inbox/ Sent Mail/ Saved Mail/ Pending Messages
3. My Albums In Phone / Memory Card / Online Albums
4. Settings & Info Auto-Save to / Status Bar / Location Account Info/ Help

8. Calculator

9. Settings

1. Display
 1. Main Screen 1. Screen Saver / 2. Slide Show / 3. Backlight / 4. Menu Styles / 5. Foregrounds / 6. PictureID
 2. Font Size 1. Messages / 2. Browser / 3. Notepad On / Off
 3. Keypad Light English / Español
 4. Language On / Off
 5. Status Light
2. Sounds
 1. Volume 1. Ringer / 2. Earpiece / 3. Speakerphone / 4. Keytones / 5. Messages/ 6. Alarm & Calendar / 7. Applications / 8. Alerts / 9. Power On/Off
 2. Ringer Type 1. Incoming Calls / 2. Messages

- 3. Vibrate Type
 - 1. Incoming Calls / 2. Messages / 3. Alarm & Calendar
- 4. Alerts
 - 1. Beep Each Minute / 2. Out of Service / 3. Connect / 4. Signal Fade/Call Drop
 - 1. Tone Length / 2. Tone Volume
- 5. Keytones
- 3. Airplane/Music Mode
- 4. Bluetooth
 - 1. On/Off On / Off
 - 2. Visibility Hidden / Visible for 3 Min / Always Visible
 - 3. My Device Name
 - 4. My Device Info
 - 5. Exchange Folder
 - 6. Voice Priority
- 5. Messages
 - 1. Notification Message & Icon / Icon Only
 - 2. Callback Number
 - 3. Signature None / Custom
 - 4. Preset Messages
- 6. Keyguard On / Off
- 7. Text Entry
 - 1. Auto-Capital On / Off
 - 2. Auto-Space On / Off
 - 3. Word Choice List On / Off
 - 4. Word Prediction On / Off
 - 5. Word Completion On / Off
 - 6. Use My Words On / Off

- 7. My Words
- 8. Help
- 8. Phone Information
 - 1. Phone Number / 2. Icon Glossary / 3. Version / 4. Advanced
- 9. More...
 - 1. Accessibility
 - 1. TTY / 2. Font Size
 - 2. Call Setup
 - 1. Auto-Answer / 2. Abbreviated Dialing / 3. Call Answer / 4. Contacts Match
 - 3. Contacts Settings
 - 1. Speed Numbers / 2. Show Secret/Hide Secret / 3. My Name Card / 4. Services
 - 4. Data
 - 1. On/Off / 2. Net Guard / 3. Update Profile
 - 5. Headset Mode
 - 6. Location
 - On / Off
 - 7. Navigation Keys
 - 8. Restrict and Lock
 - 1. Restrict Voice / 2. Lock Data / 3. Lock Photos / 4. Lock My Phone
 - 9. Roaming
 - 1. Set Mode / 2. Call Guard / 3. Data Roaming
 - *. Security
 - 1. Lock My Phone / 2. Change Lock Code / 3. Special Numbers / 4. Edit Contacts List / 5. Delete/Reset
- *. **My Stuff**
 - 1. Games
 - 2. Ringers

3. Screen Savers

4. Applications

5. Options

1. Memory Status / 2. Get New /

3. My Content Manager

0. Media Player

1. Launch

#. Tools

1. Memory Card Manager

2. Alarm Clock

1. Alarm 1 / 2. Alarm 2 / 3. Alarm 3 /

4. Alarm 4 / 5. Alarm 5 /

6. Walk the Dog / 7. Quick Alarm

3. Self-Service

4. Calendar

5. World Clock

6. USB Mode

1. Transfer Music / 2. Mass Storage /

3. Phone As Modem

7. Ez Tip Calculator

8. Voice Control

9. Voice Memo

*. Notepad

0. Utilities

1. D-Day Counter / 2. Unit Converter

#. Update Phone

Section 1

Getting Started

Setting Up Service

In This Section

- ◆ Getting Started
 - ◆ Setting Up Your Voicemail
 - ◆ Getting Help
-

Setting up service on your new phone is quick and easy.

This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact your service provider for assistance with your wireless service.

Getting Started

Unlocking Your Phone

If your phone is locked, the main display will say "-Locked-" after it is powered on.

Follow these easy steps to unlock your phone:

1. Press and hold **END** to turn the phone on.
2. Press **Unlock** (right softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.



3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call your service provider.

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. From standby mode, press and hold **1** .
2. Follow the system prompts to:
 - Create your passcode
 - Record your name announcement
 - Record your greeting
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **1** , bypassing the need for you to enter your passcode)

Voicemail Passcode

You'll create your voicemail password (or pass code) when you set up your voicemail. For more information or to change your voicemail password, please contact your service provider.

For more information about using your voicemail, see “Using Voicemail” on page 151.

Getting Help

Directory Assistance

You have access to a variety of services and information through Directory Assistance, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge, and you will be billed for airtime.

To call your wireless Directory Assistance:

▶ Press **4** GHI **1** ☒ **1** ☒ **TALK**.

Operator Services

Operator Services provides assistance when placing collect calls, when placing calls billed to a local telephone calling card or third party.

To access your wireless Operator Services:

▶ Press **0** + NEXT **TALK**.

For more information, call your service provider.

Section 2

Your Phone

Your Phone: The Basics

In This Section

- ◆ Front View of Your Phone
 - ◆ Viewing the Display Screen
 - ◆ Features of Your Phone
 - ◆ Turning Your Phone On and Off
 - ◆ Using Your Phone's Battery and Charger
 - ◆ Navigating Through Phone Menus
 - ◆ Displaying Your Phone Number
 - ◆ Making and Answering Calls
 - ◆ Entering Text
-

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Side Volume Keys** allow you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume keys can also be used to scroll up or down to navigate through the different menu options.
5. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
6. **Speakerphone Key** lets you turn Speakerphone mode on or off.
7. **MENU/OK Key** lets you access the phone's Main Menu from standby mode, and selects the highlighted choice when navigating through a menu.
8. **TALK Key** allows you to place or receive calls, answer Call Waiting, and use Three-Way Calling.

- 9. Side Camera Key** lets you activate camera mode, and take pictures.
- 10. Microphone** allows other callers to hear you clearly when you are speaking to them.
- 11. Charger/Accessory Jack** allows you to connect the phone to the phone charger and to optional accessories, such as a USB cable. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
- 12. Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **END**, **BACK**, or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.
- 13. Camera Lens**, as part of the built-in camera, lets you take pictures.
- 14. Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.

- 15. Headset Jack** allows you to plug in either a stereo or mono headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
- 16. Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
- Press **Up** to access **Send Text to**.
 - Press **Down** to access **My Stuff**.
 - Press **Right** to launch **My Albums**.
 - Press **Left** to access **Scheduler**.
- 17. BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data service session.
- 18. microSD™ Slot** lets you use the microSD™ card to expand the memory of your phone. (See “Using the microSD™ Card” on page 114.)
- 19. END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.

20. **Alphanumeric Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2–9 for speed dialing.
21. **SYM Key** allows you to enter symbols when entering text using the QWERTY® keyboard.
22. **SHIFT Key** lets you change letter capitalization when entering text using the QWERTY® keyboard.
23. **Function Key** allows you to enter an alternate character (such as @ for the S key) on the QWERTY® keyboard. (See “Entering Text With the QWERTY® Keyboard” on page 44 for details.)
24. **SPACE Key** lets you enter a space.
25. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
26. **BACK Key** deletes characters from the display in text entry mode. When in a menu, press this key to return to the previous menu.
27. **ENTER Key** selects the highlighted choice when navigating through a menu.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Note: To view a list of your phone's icons and descriptions, select **Menu > Settings > Phone Information > Icon Glossary**.



shows your current signal strength. (The more lines you have, the stronger your signal.)



tells you a call is in progress.



means your phone cannot find a signal.



indicates you are "Roaming" off the home Network.



indicates your data connection is active. (Data is being transferred.)



indicates full battery.



indicates low battery.





















indicates Ringer Only.





















indicates Vibrate Only.



indicates 1 Beep.

-  indicates 1 Beep & Vibrate.
-  indicates Vibrate All.
-  indicates Ringer Off.
-  indicates Silence All.
-  indicates Ringer & Vibrate.
-  indicates New Messages.
-  indicates New Text Message.
-  indicates New Picture Messaging.
-  indicates New Voicemail.
-  indicates Location On.
-  indicates Location Off.
-  indicates SSL.
-  indicates TTY.
-  indicates Speaker.
-  indicates Memory Card.
-  indicates Bluetooth Enabled(Hidden).
-  indicates Bluetooth Enabled(Visible).
-  indicates Bluetooth Connected.

-  indicates Alarm Clock.
-  indicates Voice Guide & Speaker On.
-  indicates Voice Guide & Speaker Off.
-  indicates Missed Calls.
-  indicates Incoming Calls.
-  indicates Outgoing Calls.
-  indicates Camera / Picture.
-  indicates Camera Resolution 1.3M.
-  indicates Camera Resolution Med.
-  indicates Camera Resolution Low.
-  indicates Zoom.
-  indicates Self Timer.
-  indicates Capture.
-  indicates Color Tone.
-  indicates Fun frame.
-  indicates Saving to in Memory Card.
-  indicates Saving to In Phone.
-  indicates Night Mode Setting.

Features of Your Phone

Congratulations on the purchase of your phone. The Rumor2 by LG is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Digital dual-band capability allows you to make and receive calls while on your wireless network, and to roam on other 1900 and 800 MHz digital networks.
- Data service provides access to the wireless Internet in digital mode (page 168).
- Voicemail (page 147), SMS Text Messaging (page 157), and MMS Picture Messaging (page 134) provide quick and convenient messaging capabilities.
- The slide-out QWERTY® keyboard makes entering text fast and easy (page 44).
- Games, ringers, screen savers, and other applications can be downloaded to make your phone as unique as you are (page 172). Additional charges may apply.
- Your Contacts List allows you to store up to 600 entries, with up to seven phone numbers per entry (page 94).

- The Calendar offers several personal information management features to help you manage your busy lifestyle (page 101).
- The Location feature works in connection with available location-based services (page 57).
- T9 Text Input lets you quickly type messages with one keypress per letter (see page 40).
- Speed dial lets you dial phone numbers with one or two keypresses (see page 38).
- You can wirelessly pair your Bluetooth-enabled phone to certain Bluetooth devices, including headsets and hands-free devices. You may also use a personal computer or hand-held device to pair with the phone for dial-up networking, using the phone as a wireless modem (page 137).
- The built-in camera allows you to take full-color digital pictures and view your pictures using the phone's display (page 122).
- Data Roam Guard will alert you when you are roaming and using your browser or other online applications, giving you the option to continue using those applications while in the roaming area (page 82).

- The microSD card expands your phone's available memory and lets you play back, store, and erase the pictures taken with your phone (pages 114).
You can also play back and store downloaded MP3 and other media files.

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press and hold **END** for approximately two seconds.

Once your phone is on, it may display “Searching for Service”, which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned on).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold **END** for two seconds until you see the powering-down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING: Use only manufacturer-approved batteries and chargers with your phone. The failure to use a manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Battery Capacity

Your phone is equipped with a Lithium-Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Li-Ion battery:

- ▶ To install, insert the battery into the opening on the back of the phone (1) and gently press down until the latch snaps into place (2).



Removing the Battery

WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.

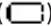 
To remove the battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Use your fingernail to pull the battery latch down (1).
3. Lift the battery from the phone (2).



Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () blinks and the phone sounds a warning tone.

Always use a manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Using the Charger

To use the travel charger provided with your phone:

- ▶ Plug the smaller end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
 - A **red indicator light** on the phone lets you know the battery is charging. (1 indicator light is located on the right side of LCD.)
 - A **green indicator light** lets you know that the battery is at least 90 percent charged. (2 indicator lights is located on the right side of LCD.)

With the manufacturer-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.


Navigating Through Phone Menus

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.





To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see “Your Phone's Menu” on page ii.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call (when menu style is set to “Grid”):

1. Press  to access the main menu.
2. Select **History** by pressing  or by highlighting it and pressing .
3. Select a call history and press .

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **BACK**.

To return to standby mode:

- ▶ Press **END**.

Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

- ▶ Select **Menu > Settings > Phone Information > Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number and press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK**.
4. Press **END** the phone when you are finished.

Tip: To redial your last outgoing call, press **TALK** twice.

You can also place calls from your phone by Speed Dialing numbers from your Contacts (page 39), and using your Call History listings (page 88).

Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options appear on the phone's display screen.

Tip: To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 98.)

- **Save** allows you to enter a seven- or ten-digit number (phone number and area code) and save the phone number in your Contacts. (See “Saving a Phone Number” on page 34.)
- **Contact Details** to display the contact details. (If the contact is saved in the Contacts.)
- **Hard Pause** allows you to enter a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 36.)
- **2-sec Pause** allows you to enter a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 36.)

-or-

Press **SEND MSG** (left softkey) to access a menu which you can use to send Text Message or Picture Messaging for the dialed number.

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by pressing any number key. See “Call Answer Mode” on page 67 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes. (1 indicator light is located on the right side of LCD.)
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **Any Key** or **TALK Key**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Silence** to mute the ringer.
- **Ignore** to send the call to your voicemail box.

Note: When your phone is off, incoming calls go directly to voicemail.

Ending a Call

To disconnect from a call when you are finished:

- ▶ Press **END**.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display a Missed Call entry from the notification screen:

- ▶ Highlight the entry and press **MENU OK**. (To dial the phone number, press **TALK**.)

To display a Missed Call entry from standby mode:

1. Select **Menu > History**.
2. Highlight the entry you wish to view and press **MENU OK**.

Calling Emergency Numbers

You can place calls to 911 (dial **9** WXYZ **1** ☒ **1** ☒ **TALK**), even if your phone is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, a list of menu options is displayed onscreen. To select an option, highlight the desired option and press **MENU OK**. The following options are available.

- **My Phone Number** to display the phone's directory number.

To exit Emergency mode:

1. Press **END** to end a 911 call.
2. Press **Exit** (right softkey).

Note: When you are in Emergency mode, you can exit only from the options menu.

Enhanced 911 (E911) Information


This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your

approximate location. Depending on several variables, including availability and access to satellite signals, it may take 30 seconds or more to determine and report your approximate location.

IMPORTANT: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Pressing **OPTIONS** (right softkey) during a call displays a list of available in-call features. To select an option, highlight the option and press . The following options may be available through the Options menu:

- **Save** to save a phone number in your Contacts. (See "Saving a Phone Number" on page 36.)
- **Contact Details** to display the contact details. (If the contact is saved in the Contacts.)
- **Main Menu** to display the phone's main menu.
- **3-Way Call** to initiate a three-way call.
- **Contacts** to display your Contacts list.
- **Voice Memo** to record the current conversation.
- **Phone Info** to check the phone number, version, etc.

Warning! Because of higher volume levels, do not place the phone near your ear during speakerphone use.

End-of-Call Options

After you receive a call from or make a call to a phone number that is not in your Contacts, the phone displays the phone number and the duration of the call. Press **OPTIONS** (right softkey) > **Save Contact** to add the new number to your Contacts. (See “Saving a Phone Number” below.)

After you receive a call from or make a call to a phone number that is already in your Contacts, the phone displays the entry name, phone number, and the duration of the call. To select one of the following options after a call has ended, press **OPTIONS** (right softkey):



New Group/ Contact Details/ Delete/ Delete All

Note: Not all End-of-Call options are displayed for calls identified as No ID or Restricted.


Saving a Phone Number

You can store up to 7 phone number entries per Contact and 600 Contacts entries in your phone. Each entry's name can contain 64 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see “Contacts” on page 92.)

To save a number from standby mode:

1. Enter a phone number.
2. Press **OPTIONS** (right softkey), highlight **Save** and press .
3. Highlight **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press .
4. Select **Mobile, Home, Work, Pager, Fax, or Other** for the phone label.
5. Use the keypad/QWERTY keyboard to enter the new contact name and press **DONE** (left softkey) to save the new entry.

– or –

Search for an existing contact name and press  to save the new number.

6. Press **DONE** (left softkey) to save the new entry.

Finding a Phone Number

You can search Contacts for entries by name.

1. While in Standby Mode, press **CONTACTS** (right softkey) and enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)
2. To select an entry, highlight it and press **MENU OK**. To dial a number, highlight it and press **TALK**.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers only after you press **TALK** again.
- **2-sec Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or saved phone numbers with pauses:

1. Enter the phone number.
2. Press **OPTIONS** (right softkey) > **Hard Pause** or **2-sec Pause**. (Hard pauses are displayed as a "P" and two-second pauses as a "T")
3. Enter additional numbers.
4. Press **TALK** to dial the number.



- or -

To save the number in your Contacts list, press **OPTIONS** (right softkey), highlight Save and press **MENU OK**.




Note: When dialing a number with a hard pause, press **OK** to send the next set of numbers.

Using Abbreviated Dialing


Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** – Retrieve any number saved in your Contacts by entering only three consecutive digits of the number. Highlight a Contact entry and press  to dial the retrieved number. (See “Contacts Match” on page 66.)
- **Prepend** – Prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. Press  to dial the resulting number.

To place a call using **Contacts Match** abbreviated dialing:

1. Enter the last three digits of a Contact entry’s phone number.
2. Use  to highlight contact match and press  to call the displayed number. (If there is more than one matched number in your Contacts, the Abbrev. Dial list is displayed. Select the name you want to call from the list, and then press  to place a call.)

To place a call using **Prepend** abbreviated dialing:

1. Enter the last four or five digits of the number.
2. Press .

Dialing From Contacts

Shortcut : From standby mode, press **Contacts** (right softkey) to list entries.

1. Press **Menu > Contacts**.
2. Select the entry you want to call and press **TALK** to dial the entry's default phone number.

– or –

To dial another number from the entry, select the name and press **MENU OK**, and then select a number and press **TALK**.

Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2-9, or two keypresses for locations 10-99.

To use **One-Touch Dialing** for speed dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling...".

To use Two-Touch Dialing for speed dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

Entering Text

Entering Text With the Alphanumeric Keypad

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contact entry or when using SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press **Mode** (right softkey) to change the character input mode.
2. Select one of the following options:
 - **Abc** to cycle through the alpha characters associated with the letters on the keypad.

- **Predictive Text** to enter text using a predictive text entering system that reduces the amount of keys that need to be pressed while entering a word.
- **123** to enter numbers by pressing the numbers on the keypad.
- **Symbols** to enter symbols.
- **Emoticons** to enter colorful emoticons.
- **Settings** to enter messages settings.

Tip: When entering text, press the * (Shift) key to change letter capitalization (**Abc** > **ABC** > **abc**).

Entering Characters Using T9 Text Input

T9 Text Input Mode lets you enter text in your phone by pressing keys just once per letter. (To select the **Predictive Text** mode when entering text, see "To change the character input mode:" on page 40.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9 Word** character input mode. (See “To change the character input mode:” on page 40.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **2** ABC **4** GHI **5** JKL **5** JKL .) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

If the word you want is not displayed after you have entered all the letters, press **0** ⁺ NEXT to scroll through additional word selections. To accept a word and insert a space, press **#** SPACE.

Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Abc** character input mode. (See “To change the character input mode:” on page 40.)
2. Enter the word using multi-tap text entry. (See “Entering Characters Using ABC Mode” on page 44.) The word will appear as an option the next time you scroll through options during T9 Text Input.




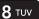 
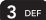 







For more information about T9 Text Input, visit the Tegic Web site at www.T9.com.

Entering Characters Using ABC Mode

1. Select **Abc** Mode. (See "To change the character input mode:" on page 40.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word "Bill," press **2 ABC** twice, **4 GHI** three times, **5 JKL** three times, and **5 JKL** three times again.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:


1  . , @ 1 ? ! * # /	7  PQRS7
2  ABC2	8  TUV8
3  DEF3	9  WXYZ9
4  GHI4	0  0
5  JKL5	#  Space
6  MNO6	*  Shift

Entering Numbers, Symbols, Smileys, Emoticons, Preset Messages


To enter numbers:

- ▶ Select **123** mode and press the appropriate number key on the keypad. (See "To change the character input mode:" on page 40.)


To enter symbols:

- ▶ Select **Symbols** mode. (See "To change the character input mode:" on page 40.) To enter a symbol, scroll through the available symbols and press , or press the corresponding number key on the keypad.

To enter smileys :

- ▶ Select **Emoticons** mode. (See "To change the character input mode:" on page 40.) To enter an emoticon, scroll through the available emoticons and press , or press the corresponding number key on the keypad.

To enter preset messages:

1. Select **Preset Messages** mode. (See "To change the character input mode:" on page 40.)
2. Scroll to the desired preprogrammed message and press .

Note: Preset messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at,” “Let’s get lunch,” or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 62.)

Entering Text With the QWERTY® Keyboard

Your phone features a slide-out QWERTY® keyboard, specifically designed for easy and comfortable text entry. The QWERTY® keyboard uses the same layout and works just like the keyboard on your computer. The easiest way to enter text is by using your thumbs to type on the QWERTY® keyboard.

To enter text with the QWERTY® keyboard:

1. In a text entry screen, slide open the QWERTY® keyboard. (The display automatically adjusts to landscape mode.)
2. Use your thumbs to enter text.
 - To change capitalization, press **SHIFT**.
 - To enter alternate characters on a key, press **FN** and then press the key. To lock the function key (as when entering a series of numbers), press twice.
 - To enter symbols, press **Ⓞ** and select a symbol.

- For additional text entry options, including Predictive Text, Symbols, and Settings, press **Options** (right softkey) Text Mode and select an option.



Controlling Your Phone's Settings

In This Section

- ◆ Sound Settings
 - ◆ Display Settings
 - ◆ Location Settings
 - ◆ Messaging Settings
 - ◆ Airplane/Music Mode
 - ◆ TTY Use
 - ◆ Phone Setup Options
-

Using the menu options available on your phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types


Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contact entries, types of calls, and types of messages.

Selecting Ringer Types for Incoming Calls




Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for Incoming calls:

1. Press **Menu > Settings > Sounds > Ringer Type > Incoming Calls**.
2. Select **Contact Entries** or **Unknown #s**. (You can identify incoming calls from the contacts or unknown by setting the different ringer type.)
 - **Contact Entries**
 - **All Contacts** You can set a ringer type for the calls from all contacts.
 - **One Contact** You can set a specific ringer type for the calls from one specific contact.

- **Unknown #s**
 - You can set a ringer type for anonymous calls.
- 3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
- 4. Press  to assign the desired ringer.



Assigning Ringer to Contacts

1. Press  > **Settings > Sounds > Ringer Type > Incoming Calls > Contact Entries > One Contact.**
2. Highlight an entry and press .
3. Select a category, and then use your navigation key to scroll through the available ringers. You will hear a sample ringer as you highlight each option.
4. Press  to assign a ringer.

Selecting Ringer Types for Messages

To select a ringer type for messages:


1. Select **Menu > Settings > Sounds > Ringer Type > Messages.**
2. Select **Voicemail, Text Message** or **Picture Messaging.**

3. Use your navigation to scroll through the available ringer types. To select a specific tone, highlight Custom and press .
4. Scroll through the available tones. a sample ringer will sound as you highlight each option.
5. Press  to assign the desired ringer.

Selecting a Key Tone

You can adjust your phone's tone volume settings.


To select a tone volume:

1. Press **Menu > Settings > Sounds > Keytones**.
2. Select an option and press .
 - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
 - **Tone Volume** to select a keypress volume level.

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:



1. Select **Menu > Settings > Sounds > Volume**.
2. Select **Ringer, Earpiece, Speakerphone, Keytones, Messages, Alarm & Calendar, Applications, Alert or Power On/Off**.
3. Using the navigation key, choose a volume level and press .

Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume keys on the left side of your phone.

Alert Notification

Your phone can alert you with an audible tone when you receive voicemail or other messages, change service areas, once a minute during a voice call, or when a call has been connected.

To enable or disable alert sounds:

1. Select **Menu > Settings > Sounds > Alerts**.
2. Select **Beep Each Minute, Out of Service, Connect or Signal Fade/Call Drop** and press .
3. Select **On** or **Off** and press .

Silence All

The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ Press the volume key down repeatedly in standby mode. (The screen will display "Silence All")

To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting, or you may enter your own custom greeting.


To display or change your greeting:

1. Press **Menu > Settings > Display > Main Screen > Foregrounds > Greeting > Custom**.
2. Use the alphanumeric keypad or the QWERTY® Keyboard to enter a new custom greeting. (See “Entering Text” on page 40.) (To erase the existing greeting one character at a time, press **BACK**. To erase the entire greeting, press and hold **BACK**.)
3. Scroll to Save and press **MENU OK** to save your new greeting.


Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any keypress is made.

To change the display backlight setting:

1. Press **Menu > Settings > Display > Main Screen > Backlight**.
2. Select a time setting and press .

To change the keypad light setting:

1. Press **Menu > Settings > Display > Keypad Light**.
2. Highlight **On** or **Off** and press .



Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your new phone offers options to customize what you see on the display screen when in standby mode.

To change the display image :


1. Press **Menu > Settings > Display > Main Screen > Screen Saver**.
2. Selected **Preloaded, My Albums, Assigned Media, My Stuff, or New Picture**.

3. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
4. Press  to assign the desired image.

Changing the Phone's Menu Style

Your phone allows you to choose how the menu appears on your display screen.

To select the display's menu style:



1. Press **Menu > Settings > Display > Main Screen > Menu Styles**.
2. Select **Grid** to view each main menu item as an animated single-screen icon, or **List** to view the main menu as a list, and press .

Shortcut: For quick access to Menu Styles, press the right softkey while in the main menu.

Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.


To change the clock's appearance on the standby screen:

1. Press **Menu > Settings > Display > Main Screen > Foregrounds > Clock & Calendar**.
2. Select **Normal Clock, Analog Clock, Digital Clock, Dual Clock, or Calendar**, and press .
3. Press  to apply the clock display setting.

Changing the Text Input Font

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contact entry).


To change the text input font:

1. Select **Menu > Settings > Display > Font Size**.
2. Select **Messages, Browser, or Notepad**.
3. Select a desired size and press .

Changing the Status Light Mode

This feature shows the status of your phone by blinking 2 lights located to the right of the display screen.


To change the status light mode:

1. Select **Menu > Settings > Display > Status Light**.
2. Select **On** or **Off** and press .

Display Language

You can choose to display your phone's menus in English or in Spanish

To assign a language for the phone's display:

1. Press **Menu > Settings > Display > Language**.
2. Select **English** or **Español** and press .



Location Settings



Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Press **Menu > Settings > More... > Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

Messages Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Using SMS Text Messaging" on page 167.)



Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages, to name just a few options.

Setting Message Notification

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

1. Select **Menu > Settings > Messages > Notification**.
2. Select **Message & Icon** or **Icon Only** and press .


Callback Number

1. Press **Menu** > **Settings** > **Messages** > **Callback Number**.
2. Select **None**, **My Phone Number**, or **Other** and press .
(If you select **Other**, enter a number and press .)

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.


To add a customized signature to each sent message:


1. Select **Menu** > **Settings** > **Messages** > **Signature** > **Custom**.
(If you do not wish to attach a signature to your outgoing messages, select **None**.)
2. Enter your signature and press . (See “Entering Text” on page 40.)

Managing Preset Messages


Your phone is loaded with 20 preset messages to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs. You can even add your own preset messages to the list.

To edit or delete a preset message:

1. Select **Menu > Settings > Messages > Preset Messages**. (The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press **OPTIONS** (right softkey).
3. Scroll to **Edit** and edit the selected message (see “Entering Text” on page 40), and press .
– or –



Scroll to **Delete** and press , and then select **Yes** to delete the selected message. (Select **No** to cancel the deletion.)

To add a new preset message:

1. Select **Menu > Settings > Messages > Preset Messages**. (The list of preset messages is displayed.)
2. To add a new message, select **ADD** (left softkey).
3. Enter your message (see “Entering Text” on page 40), and press . (Your new message will be added to the beginning of the list.)

Airplane/Music Mode

Airplane/Music Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane/Music Mode, it cannot send or receive any calls, or access online information.

1. Select **Menu > Settings > Airplane/Music Mode**. (The Airplane/Music Mode disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On, Off, or On Power Up** and press .

While in Airplane/Music Mode, your phone's standby screen will display "Phone Off."



TTY Use

ATTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard-of-hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your wireless service, please call your service provider via the state Telecommunications Relay Service (TRS) by first dialing **7** **PORS** **1** **☒** **1** **☒** **TALK** .

To turn TTY Mode on or off:

1. Select **Menu > Settings > More... > Accessibility > TTY**. (An informational message is displayed)
2. Press **MENU OK** .
3. Select **Enable TTY** to turn TTY mode on.
— or —

Select **Disable TTY** to turn TTY mode off.

Note: In TTY Mode, your phone will display the TTY access icon.

Note: If TTY Mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING: 911 Emergency Calling





It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears to be related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options

Shortcuts Using the Navigation Key

Your phone offers you the option of assigning shortcut keys to favorite or often-used functions. Pressing the navigation key left, right, up, or down in standby mode will launch your personally designated shortcuts.


To assign your shortcut keys:

1. Select **Menu > Settings > More... > Navigation Keys**. (An information window is displayed.)
2. Read the information and press .
3. Select **Left Navigation, Right Navigation, Up Navigation, or Down Navigation** and press .
4. Using the navigation key or your keypad, select the desired shortcut and press .
5. Press  to return to standby mode.

Auto-Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit or headset.


To set Auto-Answer mode:

1. Select **Menu > Settings > More... > Call Setup > Auto-Answer**.
2. To select an option, highlight it and press .
 - **Off** to disable Auto-Answer.
 - **Headset** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

Abbreviated Dialing

This allows you to dial a number using only five or six digits.




To set your abbreviated dialing options:

1. Press **Menu > Settings > More... > Call Setup > Abbreviated Dialing**.
2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press .

Call Answer Mode

You can determine how you would like to answer incoming calls on your phone.


To set call answer mode:

1. Select **Menu > Settings > More... > Call Setup > Call Answer**.
2. To select an option, highlight it and press .
 - **Any Key** to allow an incoming call to be answered by pressing any key (except ).
 - **TALK Key** to require  to be pressed to answer all incoming calls.

Contacts Match

This allows you to turn the contacts matching feature on or off.

To set your contacts match options:

1. Press **Menu > Settings > More... > Call Setup > Contacts Match**.
2. Select **On** or **Off** and press .

Text Entry

This allows you to customize text entry.

1. Select **Menu > Settings > Text Entry**.
2. Select **Auto-Capital, Auto-Space, Word Choice List, Word Prediction, Word Completion, Use My Words, My Words, or Help** and press .

Setting Your Phone's Security

In This Section

- ◆ Accessing the Security Menu
 - ◆ Using Your Phone's Lock Feature
 - ◆ Using Special Numbers
 - ◆ Erasing the Contacts List
 - ◆ Restricting Your Phone
 - ◆ Erasing Private Browser Data
 - ◆ Resetting Your Phone
-

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **Menu > Settings > More... > Security**.
2. Enter your lock code to display the Security menu.

Tip: If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call your service provider.

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers.

1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Lock My Phone > Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power Up**.)

Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **UNLOCK** (right softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Change Lock Code**, and then enter and re-enter your new lock code.

Calling in Lock Mode

You can place calls to 911, Customer Care (*611) and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 71.)

To place an outgoing call in lock mode:


- ▶ To call an emergency number, or special number, enter the phone number and press **TALK**.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to 10 special numbers in addition to your Contact entries. (The same number may be in both directories.)


To add or replace a special number:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .

Note: There are no speed dial options associated with special numbers.

Erasing Phone Content


Use the Security menu to quickly erase all the content you have created or stored in your phone.

1. Select **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Delete/Reset**.
3. To select an option, highlight it and press .
 - **Delete Private Browser Data** to delete all the content you have downloaded to your phone.
 - **Delete Contacts** to delete all the contents of your Contacts list.
 - **Delete My Stuff** to delete all the contents in My Stuff.
 - **Delete Photos** to delete all pictures in My Albums.
 - **Delete Messages** to delete all messages.
 - **Delete Voice Memo** to delete all voice memos.
4. Select **Yes** to confirm the deletion.

Resetting Your Picture Messaging Account

This option resets your authentication ID for your Picture Messaging account.


To reset your Picture Messaging account:

1. Select **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Delete/Reset > Reset Picture Messaging**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to reset your Picture Messaging account, select **Yes**.

Resetting Default Settings


Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

To reset default settings:

1. Select **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Delete/Reset > Reset All Settings**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. All data from Contacts, Messaging, Pictures, My Content, Tools, and Settings will be lost, and preference settings will be set to factory defaults.

1. Select **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Reset Phone**. (You will see a disclaimer.)
3. Read the disclaimer and press .
4. If you are certain that you would like to restore all factory settings, select **Yes**.

Controlling Your Roaming Experience

In This Section


- ◆ Understanding Roaming
 - ◆ Setting Your Phone's Roam Mode
 - ◆ Using Call Guard
 - ◆ Using Data Roam Guard
-

Roaming is the ability to make or receive calls when you're off the available network. Your new dual-band Rumor2 by LG works anywhere on the available network and allows you to roam on other analog and 1900 and 800 MHz digital networks where roaming agreements have been implemented with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the available network. Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, the roaming icon will be displayed along with the text – **Digital Roaming** – .

Tip: Remember, when you are using your phone off the available network, always dial numbers using 11 digits (1 + area code + number).

Roaming on Other Digital Networks


When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls on the available network. However, you may not be able to access certain features, such as data services.

Note: If you're on a call when you leave the available network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think network service is available, turn your phone off and on again to reconnect to the available network.

Checking for Voicemail Messages While Roaming

When you are roaming off the available network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your Voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press  SHIFT .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the available network, voicemail notification will resume as normal.


Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience.

To set your phone's roam mode:

1. Press **Menu > Settings > More... > Roaming > Set Mode**.
2. To select an option, highlight it and press .
 - **Automatic** seeks network service. When network service is unavailable, the phone searches for an alternate system.
 - **Home Only** allows you to access the available network only and prevents roaming on other networks.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the available network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the available network.)

To turn Call Guard on or off:

1. Press **Menu > Settings > More... > Roaming > Call Guard**.
2. Select **On** or **Off** and press .

Note: Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press **TALK**. (You can also initiate a call from the Contacts, Call History, or Messaging.)
2. Select **Yes**.

To answer incoming roaming calls with Call Guard on:


1. Press **TALK**. (A message will be displayed notifying you that roaming charges will apply.)
2. Select **Yes**.

Note: If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Using Data Roam Guard

When Data Roam Guard is enabled, you will be asked if you want to continue using your browser or other online applications when you are in a data roaming area. When Data Roam Guard is turned off, your phone will establish or maintain a data connection in a data roaming area without asking you for permission.

To turn Data Roam Guard on or off:

1. Press **Menu > Settings > More... > Roaming > Data Roaming**.
2. Select **Default, Always Ask** or **Never Ask** and press  .

Managing History

In This Section

- ◆ Viewing History
 - ◆ History Options
 - ◆ Making a Call From History
 - ◆ Saving a Phone Number From History
 - ◆ Prepend a Phone Number From History
 - ◆ Erasing History
-


Call History keeps track of incoming calls, calls made from your phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 60 phone numbers (or Contact entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list, and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contact entry name (if the phone number is in your Contacts). All call logs (same number and type of call) may appear on the list.



To view a Call History entry:

1. Press **Menu > History**.
2. Highlight the entry you wish to view and press .

Note: Call History only records calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not appear in the phone's Incoming or Missed call logs.

Note: If you return a call from the voicemail menu, it will not appear in your phone's Outgoing call log.

History Options



For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing , you can select from the following options:

- **New Group** allows you to save the current history entry to a new group.
- **Save Contact** to save the number if it is not already in your Contacts. (See “Saving a Phone Number From Call History” on page 87.)
- **Contact Details** allows you to view the contact information.
- **Delete** to delete the entry.
- **Delete All** to delete the entry.

Tip: You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.



Making a Call From History

To place a call from Call History:

1. Press  > **History**.
2. Highlight an entry and press .

Note: You cannot make calls from Call History to entries identified as **No ID** or **Restricted**.

Viewing History Thread





To view the History Thread for a contact, press . Your phone will display all events related to the contact. Press  again to choose from the following options:

- Call
- Send Message
- Contact Details
- Prepend
- Delete


Saving a Phone Number From History


Your phone can store up to 600 Contact entries. Contact entries can store up to a total of seven phone numbers, and each entry's name can contain 64 characters.

To save a phone number from History:

1. Use your navigation key to select a History entry and press .
2. Scroll to **Save** and press .
3. Select **New Entry** to create a new internal Contact entry for the number, or **Existing Entry** to save the number to an existing entry.
4. Use your navigation key to highlight the information you want to edit, and then press .
5. Use the keypad to type in the new entry name and press .

— or —

Use your navigation key to scroll through your existing Contact entries, highlight a name, and press .

6. Use your navigation key to select a phone number type (Mobile, Home, Work, Pager, Fax, or Other) and press .

7. Press **Save** (left softkey) to save the entry.




After you have saved the number, the new Contact entry is displayed. (See “Contact Entry Options” on page 96.)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

Prepend a Phone Number From History

If you need to make a call from History and you happen to be outside your local area code, you can Prepend the number by adding the appropriate prefix.

To prepend a phone number from History:

1. Select a History entry and press .
2. Scroll to **Prepend** and press .
3. Enter the prefix and press  to call the number.

— or —

Scroll to **Save** and press  to save the amended number in your Contacts.

Erasing History

To erase individual History entries, see “History Options” on page 87.

To erase History:

1. Press **MENU OK** > History.
1. Press **OPTIONS** (right softkey) > **Delete All**.
1. If you are certain you want to erase the History, select **DELETE** (left softkey).

– or –

Select **CANCEL** (right softkey) to return to the previous menu.

Using Contacts

In This Section





- ◆ Adding a New Contact Entry
 - ◆ Finding Contact Entries
 - ◆ Contact Entry Options
 - ◆ Adding a Phone Number to a Contact Entry
 - ◆ Editing a Contact Entry's Phone Number
 - ◆ Assigning Speed Dial Numbers
 - ◆ My Name Card
 - ◆ Editing a Contact Entry
 - ◆ Selecting a Ringer Type for an Entry
 - ◆ Dialing Services
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts List, and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Adding a New Contact Entry

Your phone can store up to 600 Contact entries. Contact entries can store up to a total of seven phone numbers, and each entry's name can contain 64 characters.

To add a new entry:

1. Select **Menu > Contacts > Add New**.
2. Scroll to **<New Contact>** and press .
3. Enter a name for the new entry and press . (See “Entering Text” on page 40.)
4. Scroll to **[Add Number]**, enter the phone number, and then press .
5. Select a label field (Mobile, Home, Work, Pager, Fax, or Other) and press .
6. Scroll down to additional fields and enter or edit information as desired.
7. Press **Done** (left softkey).

Shortcut: You can also begin by entering the phone number in standby mode and selecting Save. (See “Saving a Phone Number” on page 34.)




After you have saved the number, the new Contact entry is displayed. (See “Contact Entry Options” on page 96.)

Finding Contact Entries

There are several ways to display your Contact entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Group Entries









To find entries designated as part of a group:

1. Select **Menu > Contacts > Add New > New Group**.
 2. Scroll through the group titles using your navigation key. To display entries belonging to a group, highlight the group and press .
 3. To display an entry within the group, highlight it and press .
 4. To dial the entry's default phone number, press .
- or —

To display additional Contact entries, press the navigation key left or right.

Contact Entry Options




To access a Contact entry's options, display the entry, highlight **<Edit Entry>**, and press . To select an option, highlight it and press .

-  **[Add Name]** to add a new contact name to the entry.
-  **[Add Number]** to add a phone number to the entry. (See “Adding a Phone Number to a Contact Entry” on page 97.)
-  **[Add Email]** to add an email address to the entry.
-  **[Default Ringer]** to assign a preprogrammed or downloaded ringer.
-  **[Default Vibrate Type]** to assign a preprogrammed or downloaded tone for incoming text messages.
-  **[Memo]** to add a note, street address, or other information.
-  **[No Secret]** to assign an image type to the entry.
-  **[URL]** to add a Web site's URL to the entry.

Tip: You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Adding a Phone Number to a Contact Entry

To add a phone number to an entry:





1. Display a Contacts entry. (See “Finding Contact Entries” on page 94.)
2. Scroll to <Edit Entry> and press .
3. Press **OPTIONS** (right softkey) > **Edit Contact** > [**Add Number**].
4. Enter the new phone number and press .
5. Select a label field for the number and press .
6. Press **Done** (left softkey) to save the new number.

— or —

Press **Options** (right softkey), assign a speed dial number for the number, and then press **Save** (left softkey) to save your new settings.

Editing a Contact Entry's Phone Number

To edit an entry's phone number:

1. Display a Contact entry.
2. Press **OPTIONS** (right softkey) > **Edit Contact**.
3. Highlight the number you wish to edit and press .
4. Press  to clear one digit at a time, or press and hold  to erase the entire number.
5. Re-enter or edit the number and press .
6. Press **DONE** (left softkey) to save the number.

— or —



Press **Options** (right softkey) for additional options. When you're finished, press **DONE** (left softkey) to save your new settings.

Assigning Speed Dial Numbers

Your phone can store up to 98 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 38.




Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new phone number:

1. Add a phone number to a new or to an existing Contact entry. (See “Adding a New Contact Entry” on page 91 or “Adding a Phone Number to a Contact Entry” on page 94.)
2. Press **OPTIONS** (right softkey).
3. Highlight **Set Speed Dial** and press .
4. Select an available speed dial location and press .
5. Press **DONE** (left softkey) to save the new speed dial number.

To assign a speed dial number to an existing phone number:

1. Display a Contact entry. (See “Finding Contact Entries” on page 92.)
2. Highlight the phone number for which you wish to assign a speed dial number, and press **Options** (right softkey).

3. Highlight **Set Speed Dial** and press .
4. Select an available speed dial location and press .
5. Scroll to **Set Speed Dial** and press . (A confirmation will be displayed.)
6. Press **Done** (left softkey) to save the new speed dial number.

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select **Replace** to assign the location to the new phone number and delete the previous speed dial assignment.

Send All Contacts



After searching for available Bluetooth devices, this feature allows you to send all entries saved in the Contacts list to the selected device.

To access **Send All Contacts**:

- ▶ Press **Menu > Contacts > Option**(right softkey) > **Send Contact**.

Editing a Contact Entry




To make changes to an entry:

1. Display a Contact entry.
2. Press **OPTIONS** (right softkey) > **Edit Contact**.
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press .
4. Add or edit the desired information and press .
5. Press **DONE** (left softkey) to save your changes.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 49.)

To select a ringer type for an entry:

1. Display a Contact entry.
2. Press **OPTIONS** (right softkey) > **Edit Contact**.
3. Highlight the current ringer type () and press  to display the Ringer Type menu.
4. Select a ringer type and press .
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)

6. Highlight a ringer and press **MENU OK**.
7. Press **DONE** (left softkey) to save the new ringer type.

Dialing Services

Your Contact list is preprogrammed with contact numbers for various Services.

To dial a service from your Contacts:

1. Select **Menu > Contacts > Option** (right softkey) > **Settings > Services**.
2. Select **Community Information, Non-Emergency Svcs, Traffic Information, TRS for TTY Users, Call Before You Dig**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Community Information** – **2 ABC** **1** **1**
 - **Non-Emergency Services** – **3 DEF** **1** **1**
 - **Traffic Information** – **5 JKL** **1** **1**
 - **TRS for TTY Users** – **7 PQRS** **1** **1**
 - **Call Before You Dig** – **8 TUV** **1** **1**
2. Press **TALK** to place the call.

Using the Phone's Calendar and Tools

In This Section

- ◆ Using Your Phone's Calendar
 - ◆ Using Your Phone's Alarm Clock
 - ◆ Using Your Phone's Notepad
 - ◆ Using Your Phone's Tools
-

Your phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Using Your Phone's Calendar





Adding an Event to the Calendar






Your Calendar helps organize your time and reminds you of important events.

To add an event:

1. Select **Menu > Tools > Calendar**.
2. Using your navigation key, highlight the day to which you would like to add an event and press **ADD** (left softkey).

Tip: Press the navigation key up or down to scroll by week through the Calendar.

3. Select a time for the event by highlighting the time field and pressing .
 - Using your keypad and/or navigation key, set the start and end time for the event and press .
4. Select a title for the event by highlighting **[Content]** and pressing .
 - Enter the event title and press . (See “Entering Text” on page 40.)


5. Select a repeating status for the event by highlighting the repeat field and pressing  .
 - Highlight **None, Daily, Mon - Fri, Select days, Weekly, Monthly,** or **Yearly** and press .
6. Select an alarm time for the event by highlighting the alarm field and pressing  .
 - Highlight **None, On time, 5 minutes, 10 minutes, 1 hour, 1 day,** or **2 days** and press .
7. Select a ringer type for the alarm by highlighting the ringer field and pressing  .
 - To select a ringer menu, press ringers.
8. Press **Save** (left softkey) to save the event.

Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

Event Alert Menu


When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press .

To view additional options, press the appropriate softkey.

- **Dismiss** (right softkey) displays the event detail screen.
- **Snooze** (left softkey) silences the alarm and schedules it to replay again in 5 minutes.

Viewing Events

To view your scheduled events:

1. Select **Menu > Tools > Calendar**.
2. Using your navigation key, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip: In the calendar view, days with events scheduled are underlined.

3. To display the details of an event listed in the schedule, highlight it and press .


Going to Today's Calendar Date

To go to the Calendar menu for today's date:

- ▶ Select **Menu > Tools > Calendar > Options > Go to Today.**

Erasing a Day's Events

To erase a day's scheduled events:

1. Select **Menu > Tools > Calendar.**
2. Using your navigation key, highlight the day for which you would like to erase events and press .

Tip: In the calendar view, days with events scheduled are underlined.

3. Select **OPTIONS > Delete All.** (An alert will appear notifying you of the number of events to be erased.)
4. Select **Yes or No.**

Note: If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "This is a recurring event. Do you want to?" Select **Delete this event only** to erase a single occurrence, **Delete all events** to erase all occurrences of the event, or **Cancel** to cancel the deletion of the repeating event.

Purging Events

To delete events scheduled before a specific time and date:

1. Select **Menu > Tools > Calendar > Options > Delete Old**.
2. Select the option to erase events older than **One Day**, **One Week**, **One Month**, or **One Year**. (A dialog will be displayed to inform you how many old events have been erased.)

Purging All Events








To delete all scheduled events:

1. Select **Menu > Tools > Calendar > Options > Delete All**. (A dialog will be displayed informing you how many events will be erased.)
2. Select **Yes** to erase all events or **No** to return to the calendar view.

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.


To use the alarm clock:

1. Select **Menu > Tools > Alarm Clock**.
2. Select **Alarm 1, Alarm 2, Alarm 3, Alarm 4, Alarm 5, Walk the Dog** or **Quick Alarm**.
3. Turn the alarm on or off by highlighting the activation field and pressing 
 - Select **On** or **Off** and press .
4. Select a time for the alarm by highlighting the time field and pressing 
 - Using your keypad and/or navigation key, set the alarm time and press .
5. Select a repeating status for the alarm by highlighting the repeat field and pressing 
 - Highlight **Once, Daily, Mon - Fri, Weekends** or **Select days** and press .
6. Select a ringer type for the alarm by highlighting the ringer field and pressing 
 - To select a ringer menu for ringers.
7. Press **SAVE** (left softkey) to save your alarm settings.


Using Your Phone's Notepad

Your phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.


To compose a note:

1. Select **Menu > Tools > Notepad > Add**(left softkey).
2. Type your note using the alphanumeric or the QWERTY Keyboard and press . (See “Entering Text” on page 40.)

To read a saved note:

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .

To delete saved notes:

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .
3. Press **OPTIONS**(right softkey) > **Delete**.
4. Press **YES** (left softkey).

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

Using EZ Tip Calculator



To quickly and easily calculate tip amounts:


1. Select **Menu > Tools > Ez Tip Calculator**.
2. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)
3. If you're splitting the check, highlight **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select **Menu > Calculator**.
2. Enter numbers using your keypad.
 - Press  **SHIFT** to enter decimal points.
 - Press  **SPACE** to change the numeric value from positive to negative.

- Press **Clear** (left softkey) to clear all numbers.
- 3. Press  for the total.
- ▶ Navigation Key Function : Up(+)/ Donw(-)/ Left(÷)/ Right(x)


Using the World Clock



To view the time in over 50 different locations:

1. Select **Menu > Tools > World Clock**.
2. Press **CITIES** (right softkey) to select a city.
– or –
Press the navigation key left or right to scroll through different time zones.
3. Press **SET DST** (left softkey).

Using the D-Day Counter

To set a countdown timer for an upcoming event:

1. Press **Menu > Tools > Utilites > D-Day Counter**.
2. Press **ADD** (left softkey).
3. Select a time for the event by highlighting the time field and pressing .

4. Select a title for the event by highlighting **[Content]** and pressing .
- Enter the event title and press .
5. Press **Save** (left softkey).

Using the Unit Converter

1. Press **Menu > Tools > Utilites > Unit Converter**.
2. Select **Length, Area, Mass, Volume, or Temperature**.
3. Highlight the known unit type and enter the value. The conversion is displayed automatically.

Using Your Phone's Voice Services

In This Section

◆ Managing Voice Memos

This section includes easy-to-follow instructions on using managing voice memos.

Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Recording Voice Memos

To record a voice memo:

1. Press **Menu**>**Tools**>**Voice Memo**>**RECORD**(left softkey).
2. Wait for the beep and then start speaking. (As it is recording, the timer counts up.)


To end the recording of your memo:

- ▶ Press **STOP** (left soft key).

To record a conversation during a phone call:

- ▶ During a call, scroll to **Voice Memo** and press  .


To end the recording of your conversation:

- ▶ Scroll to **Stop Voice Memo** and press  to end the recording prior to the countdown completion.

Note: Your phone can store a total of **ten** minutes of memos.

Voice Memo Options

To play the voice memos you have recorded:

1. Press **Menu > Tools > Voice Memo**.
2. Scroll to the voice memo you wish to hear and press **OPTIONS** (right soft key).
 - **Set As** to assign the recording as a default ringer, a voicemail alert, a message alert, or a Contacts ringer.
 - **View Details** to view the selected voice memo information.
 - **Edit Title** to edit the selected voice memo title.
 - **Delete This** to erase the selected voice memo.
3. Scroll to **Play** and press .

Erasing Voice Memos

To erase all voice memos:

1. Select **Menu > Tools > Voice Memo**.
2. Scroll to the voice memo you wish to delete and press **OPTIONS** (right soft key) > **Delete This, Delete Multiple, Delete All**.
3. Press **YES** (left soft key) to confirm that you want to erase all voice memos.

Using the microSD Card

In This Section

- ◆ Using Your Phone's microSD Card and Adapter
 - ◆ microSD Settings
 - ◆ microSD Folders
 - ◆ Connecting Your Phone to Your Computer
-

Your phone lets you use a microSD card and an adapter to expand the available memory space. This highly secure digital card enables you to exchange images, music, and voice data between SD-compatible devices.

This section details the features and options of your phone's microSD functionality.

Using Your Phone's microSD Card and Adapter

Using the microSD Card

Your phone is not equipped with memory card. So you purchase your own memory card to enjoy music on.

Inserting the microSD Card

1. Open the microSD access panel located on the right side of the phone.
2. Position the microSD card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

Note: Be sure to use only recommended microSD cards (32MB–4GB). Using non-recommended microSD cards could cause data loss and damage your phone.

Removing the microSD Card

1. Open the microSD access panel located on the right side of the phone.
2. Push in and then release the microSD card to eject.
3. Pull the microSD card out of the phone.

Note: The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.

microSD Icon Indicators

The following icons will be displayed on your phone's display screen when a microSD card is properly inserted into the microSD card slot:



Indicates that a microSD card has been inserted into your phone.

DO NOT: remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.

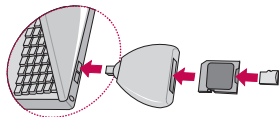 
Note: Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

Using the microSD Adapter

A microSD adapter (included when you purchase a microSD card) allows microSD cards to be used in SD-compatible devices. Before using, you will need to insert the microSD card into the microSD adapter.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.



To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card, and gently pull outward to remove it from the adapter.

microSD Settings

Creating Folders in the microSD Card

The following steps allow your phone to create default folders for storing files in your microSD card.


1. With the microSD inserted, press **Menu > Tools > Memory Card Manager**.
2. Press **OPTIONS** (right softkey) and select **Create New Folder**. (The phone will create the microSD's default folders: DCIM.)

Viewing Memory in the microSD Card

1. With the microSD inserted, press **Menu > Tools > Memory Card Manager**.
2. Press **OPTIONS** (right softkey) and select **Memory Info**. (The used and available memory space will be displayed.)

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.



1. With the microSD inserted, press **Menu > Tools > Memory Card Manager**.
2. Press **OPTIONS** (right softkey) and select **Format Memory Card**.
3. If you are sure you wish to remove all the files from your microSD card, select **Format** and press .

Note: The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

microSD Folders


Displaying Your microSD Folders

All the files stored in your microSD are accessible through your microSD card folders.

1. With the microSD inserted, press **Menu > Tools > Memory Card Manager**.
2. Select a folder and press .
3. To view or play a file, select it and press  or the appropriate softkey.

Connecting Your Phone to Your Computer

Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the computer, you can transfer your data to or from the microSD card.

1. With the microSD inserted, press **Menu > Tools > USB Mode > Mass Storage**.
2. Select **Yes** and press .
3. Connect your phone to your computer using a compatible USB cable.
(Wait for the connection to be completed. When connected, the host computer will automatically detect your phone.)

To remove the connection:

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.

Note: No driver installation is required for Windows 2000/ME/XP users. If you use Windows 98/98SE, you have to download and install the USB Mass Storage Driver. LG USB Driver is downloadable from the following site: <http://www.lge.com>.

To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while files are being accessed or transferred.

DO NOT use your computer to change or edit folder or file names on the minSD, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.

DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.

While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.

If you connect a mass storage device to a peripheral device, your device may not work properly.

Using the Built-in Camera

In This Section

- ◆ Taking Pictures
 - ◆ Storing Pictures
 - ◆ Sending Picture Messaging
 - ◆ Settings and Info
-

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun, and it's as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 10 people.

This section explains the features and options of your phone's built-in camera.


Taking Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

To take a picture with the phone open:

1. Press **Menu > Photos > Camera** to activate camera mode. (Additional camera options are available through the camera mode **OPTIONS** menu. See “Camera Mode Options” on page 125 for more information.)


Shortcut : To activate camera mode, you can also press the side camera button. (See illustration on page 9.)

2. Using the phone's main display screen as a viewfinder, aim the camera lens at your subject.
3. Press **CAPTURE** (left softkey),  or the side camera button until the shutter sounds. (The picture will automatically be saved in your selected storage area.)
 - To return to camera mode to take another picture, press the side camera button.
4. Press **OPTIONS** (right softkey) for more options:
 - **Send** to send your picture.


- **Upload** to upload the picture to your service provider's web site.
- **Assign** to assign the picture to a phone task. Select an option:
 - **Picture ID** to assign the picture to a Contacts entry.
 - **Screen Saver** to use the picture as a screen saver.
- **Delete** to delete the picture you just took.
- **Review/Send Media** to go to the In Phone folder or microSD folder (if available) to review your saved pictures.
- **Take New Picture** to return to camera mode to take another picture.

Camera Mode Options

In camera mode, press **Options** (right softkey) to display additional camera options:

- **Self Timer** to activate the camera's timer. (See "Setting the Self-timer" on page 126 for details.)
- **Color Tone**: Press the navigation key right or left to select **Normal**, **Black & White**, **Negative**, or **Sepia**. (The default setting is **Normal**.)
- **Image Controls** to select from the following options:
 - **Brightness** to select **Auto** or **Manual** brightness control. If you select **Manual**, press the navigation key right (increase) or left (decrease) to select a setting, and press  to apply the selected setting.
 - **White Balance** to adjust white balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, **Cloudy**, or **Manual -5~5**.
- **Fun Frames**: Press the navigation key select.
- **Settings** to select **Resolution**, **Quality**, **Shutter Sound**, **Status Bar** or **Night Mode**. (See "Selecting Camera Settings" on page 127 for details.)
- **Review/Send Media** to display the pictures saved in the In Phone or Memory Card folder.

Setting the Self-timer

1. From camera mode, press **OPTIONS > Self Timer**.
2. Highlight the length of delay you want the timer to use (**Off**, **5 seconds**, or **10 seconds**) and press .
3. Press **START** (left softkey) when you are ready to start the timer. (A countdown is displayed in the middle of the screen and the phone begins to beep.)
4. Get ready for the picture. (When the timer is down to three seconds, the Self-timer icon will turn red and the phone beeps during the entire countdown time.)


Note: While the Self-timer is active, all keys are disabled except Back, End, and the right softkey (Cancel).

To cancel the Self-timer after it has started:

- ▶ Press **CANCEL** (right softkey).


Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1 step to 15 step.

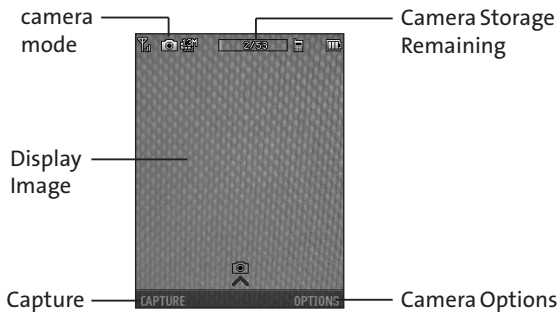 
1. From camera mode, press the navigation key up or down, or the side volume key up or down to adjust the zoom. (The gauge bar is displayed.)
2. Press **CAPTURE** (left softkey), , or the side camera button to take the picture. (The picture will automatically be saved in your selected storage area.)

Note: The Zoom gauge will not be displayed when the Resolution setting is 1.3M (960*1280).

Selecting Camera Settings

1. From camera mode, press **OPTIONS > Settings**.
2. Select an option and press :
 - **Resolution** to select a picture's file size [**1.3M (960*1280)**, **Med (480*640)**, or **Low (240*320)**].
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - **Shutter Sound** to select a shutter sound (**Default**, **Say Cheese**, **Ready 1,2,3**, **Smile**, or **Off**).
 - **Review/Send Media** to display the pictures saved in the In Phone or Memory Card folder.

Viewing Your Camera's Status Area Display



Storing Pictures

Your phone's picture storage area is called **My Albums**. There are three types of folders in My Albums:

- **In Phone.**
- **Memory Card.**
- **Online Albums.**

Setting Storage Options

1. Press **Menu > Photo > Settings & Info > Auto-Save to**.
2. Select **Memory Card** or **In Phone**.

In Phone Folder

Your phone's internal storage area is called the **In Phone** folder. From the In Phone folder, you can view all the pictures you have stored there, send items to your service provider's web site, delete files, and access additional options.

To review your stored pictures in the In Phone folder:

1. Press **Menu > Photo > My Albums > In Phone**.
2. Use your navigation key to view and scroll through the pictures.

Memory Card Folders

You can save pictures directly to the microSD card using your phone's pictures settings.

To review your stored pictures in the microSD:


1. Press **Menu > Photo > My Albums > Memory Card**.
2. Use your Navigation key to scroll through and view saved pictures.

In Phone Folder and Memory Card Options

When you are viewing the In Phone folder or the Memory Card folders, press **OPTIONS** (right softkey) to display the following options:

* indicates options.

- **Play** to play a video (if any file).
- **Send** to send an image to another user using Picture Messaging.
- **Upload** to upload files from the In Phone folder to the Picture Messaging Web site. Depending on your settings, you may be prompted to accept a web browser connection. Select **My Uploads** or **My Albums** and then press **Continue** to upload the selected image(s).
- **Assign** to display the following options:

- **Screen Saver** to display the currently highlighted picture as a screen saver.
- **Picture ID** to display the currently highlighted picture for incoming calls from a specific Contacts entry. Select the desired entry and press .
- **Delete** to delete pictures from the In Phone Folder. Select **Delete selection** or **Delete all**.


Note: Deleting pictures will free up memory space in your phone to enable you to take more pictures. Once deleted, items cannot be uploaded to your online Picture Messaging account.

- **Edit** to display the following options:
 - **Copy/Move** to edit the selected item's caption.
 - **Text Caption** to edit the selected item's caption.
 - **Zoom** to zoom the selected item.
 - **Rotate** to rotate the selected item.
 - **Flip** to display information such as None, Flip Horizontal, Flip Vertical, Flip Both, and Close.
 - **Advanced** to display information such as Enhancement, Brightening, White Balancing, and Local Intensity Boost.
- **Effects** to display the following options:

- **Image Effects** to display information such as Antique, Emboss, Fog, Gray Sketch, Posterize, Paint, Glow, Stamp, Cartoon and Mirror.
- **Face Warp** to display information such as Up Nose, Twister, Small Nose, Wide Smile, Grit, Big Face, Professor, Alien, Big Nose, Alien Hybrid, Gobbler, Square, Sharp Chin, Long Faced, Happy Fool and Insect.
- **Album List** to display the My Albums list.
- **Camera Mode** to activate Camera mode.
- **Detail** to Detail the selected item.

Online Albums

Picture Messaging allows you to save your pictures to Online Albums that make it easy to save, organize and share all your pictures.

1. Select a picture from your online Picture Messaging album.
 2. Press **OPTIONS**(right softkey) to display options.
 3. Highlight an option and press  .
- **Send** to send your picture.
 - **Assign** to assign the picture to a phone task. Select an option:
 - **Screen Saver** to use the picture as a screen saver.
 - **Picture ID** to display the picture for All Contacts, One Contact, or Unknown #s.
 - **Delete** to select **Delete selection** or **Delete All** to erase a single picture or all pictures saved in the current album.
 - **Save To** to copy the selected pictures to the In Phone folder or Memory Card folder.
 - **Edit** to display the following options:
 - **Copy/Move** to copy or move pictures to as elected album:
 - **Copy This** to copy the selected pictures to another album.




- **Copy All** to copy all pictures in the current album to another album.
- **Move This** to move the selected pictures to another album.
- **Move All** to move all pictures in the current album to another album.
- **Text Caption** to edit the selected item's caption.
- **Rotate** allows you to rotate image and save it.
- **Album List** to display the online album list. Press **OPTIONS** (right softkey) > Create Album a Picture Message to create a new album.
- **Detail** to display information such as **Caption, Model, Taken, Resolution, File size, Quality, Location** and **Uploaded**.


Sending a Picture Message

Once you have taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to 25 people at a time using their email addresses or their phone numbers.

Sending Pictures From the In Phone Folder or the Memory Card

1. Press **Menu > Photo > My Albums > In Phone** or **Memory Card**.

2. Select a picture to send and press . (The check box in the lower right corner will be marked. You can select multiple pictures)
3. Press **OPTIONS** (right softkey) > **Send** > **Picture Messaging**.
4. Select **Go to Contacts** or **NEW ADDR** to enter the recipients.
 - **Go to Contacts** to select recipients from your Contacts. Select a recipient and press .
 - **NEW ADDR** to enter a mobile phone number or an email address directly.
5. Highlight a contact or enter a mobile number or an email address using the keypad, and press .
6. If you wish to include a subject, select Subj: and press **ADD** (right softkey) or . Enter your subject using the keypad and press **SAVE** (left softkey) to save and exit.
7. If you wish to include a text message, highlight Text: and press **ADD** (right softkey) or . Enter your message using the phone's keypad (or press **MODE** [right softkey] to select from Preset messages or Preset Suffix) and press **SAVE** (left softkey) to save and exit.

8. If you wish to include a voice memo message with the picture, select Audio: and press **RECORD** (right softkey) or . Press **DONE** (left softkey) to stop recording. (The maximum recording time is 15 seconds.)
9. Confirm the **recipients, subject, message, attached audio and picture.**
 - To change a recipient, highlight the To: field, and press **CHANGE** (right softkey), and follow the instructions in step 5 to select or edit the recipient.
 - To change the subject, select Subj: field, and press **CHANGE** (right softkey).
 - To change the text message, select the Text: field, and press **CHANGE** (right softkey).
 - To change the voice memo, select the Audio: field, press **REVIEW** (right softkey), and select Re-Record.
 - To change the attached picture(s), select athumbnail picture and press **CHANGE**. (right softkey). Select the picture(s) by pressing and press **NEXT** (left softkey).
10. Press **SEND** (left softkey) to send the picture. If you are notified that “Message sent,” press **CONTINUE**(left softkey) to complete the process of sending the picture.

Using Bluetooth

In This Section

- ◆ Turning Bluetooth On and Off
 - ◆ Using the Bluetooth Settings Menu
 - ◆ Bluetooth Profiles
 - ◆ Pairing Bluetooth Devices
-

Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.


Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, Bluetooth-enabled handhelds, PCs and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.


Turning Bluetooth On and Off

By default, your device's Bluetooth functionality is turned off. Turning Bluetooth on makes your phone "available" by other in-range Bluetooth devices.

To turn Bluetooth on:

1. Select **Menu > Bluetooth > More... > Settings > On/Off**.
2. Press the navigation key up or down to select **On** and press  to enable Bluetooth.

To turn Bluetooth off:

1. Select **Menu > Bluetooth > More... > Settings > On/Off**.
2. Press the navigation key up or down to select **Off** and press  to disable Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



indicates Bluetooth is hidden.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the **Bluetooth Settings** menu:


1. Select **Menu > Bluetooth > More... > Settings**.
2. Set your Bluetooth options.
 - Select **Visibility > Hidden, Visible for 3 min, or Always Visible** to set your Bluetooth® visibility.
 - Select **My Device Name** to rename your phone for Bluetooth®.
 - Select **My Device Info** to display your phone's Bluetooth® profiles and address.

- Select **Exchange Folders** to display your phone's Bluetooth® destination for files communicated between your phone and a Bluetooth-enabled device using the FTP transfer protocol.
- Select **Voice Priority** to display your phone's Bluetooth® communication priority.

Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth settings menu allows you to manage your phone's availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Press **Menu > Bluetooth > More... > Settings > Visibility**.
2. Select your desired visibility setting and press :
 - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.
 - **Visible for 3 Min** to allow Bluetooth devices to detect and identify your phone for three minutes.
 - **Always Visible** to allow Bluetooth devices to detect and identify your phone at any time it is within range.

Note: Any changes you make to your Bluetooth settings will be saved to the current profile when you exit the Bluetooth settings menu.

Bluetooth Settings: My Device Name

The **Device Name** section of the Bluetooth settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your visibility settings.

To set a Bluetooth name for your phone:

1. Press **Menu > Bluetooth > More... > Settings > My Device Name**.
2. Press **BACK** to clear the current name.
3. Use your keypad to enter a new name and press **MENU OK** to save and exit.

Bluetooth Settings: My Device Information

To display your phone's Bluetooth address:

- ▶ Press **Menu > Bluetooth > More... > Settings > My Device Info**.

Bluetooth transfer audio function

To use the Bluetooth transfer audio function during a call:

1. Check that a Bluetooth headset is connected to your phone.

2. During the call, transfer the phone's sound output from the phone to the headset (select **Transfer to Bluetooth**); or from the headset to the phone (select **Transfer to Phone**).

Bluetooth Profiles

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **Headset Profile (HSP)** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset and a built-in alert tone can be heard through the handset. The call can then be received by pushing a button. While using the handset, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the handset.
- **Hands-Free Profile (HFP)** – This profile functions as a wireless car-kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed

dial and number dial. Increase or decrease the volume by using the volume key on the side of the handset.



- **DUN: Dial-Up Network Profile**—This profile functions as a wireless data cable, connecting a PC or PDA to a network through your handset.
- **Object Push Profile (OPP)**—You can send a vCard or a vCalendar in your phone to other Bluetooth-enabled devices.
- **Phonebook Access Profile (PBAP)**—This profile enables exchange of Contacts information between devices. It is likely to be used between a car kit and a mobile phone to allow the car kit to display the name of the incoming caller.
- **The Human Interface Design (HID)** - profile is supported only for keyboard input.
- **File Transfer** allows sending or receiving non-protected data files to a compatible Bluetooth® device.

Pairing Bluetooth Devices

Add Device

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select **Menu > Bluetooth > Add New... > Search**. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Enter the passkey and press .

Section 3

Service Features

Service Features: The Basics

In This Section

- ◆ Using Voicemail
 - ◆ Using SMS Text Messaging
 - ◆ Using Caller ID
 - ◆ Responding to Call Waiting
 - ◆ Making a Three-Way Call
-



Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your wireless service. This section outlines your basic service features.

Using Voicemail

Setting Up Your Voicemail


All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold **1** .
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **1** , bypassing the need for you to enter your passcode).

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

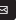 
- ▶ Press and hold **1** .

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in your wireless service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold **1** . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Select **Menu > Messages > Voicemail**.
2. Press **TALK** to listen to your messages.

Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.



Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press *** SHIFT**.
3. Enter your passcode.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Voicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 155.

1 	2 ABC	3 DEF
Date/Time	Send Reply	Advance
4 GHI	5 JKL	6 MNO
Replay	Rewind	Forward
7 PQRS	8 TUV	9 WXYZ
Erase	Call Back	Save
* SHIFT	0  NEXT	# SPACE
Cancel	Help	Skip





Voicemail Options

Your phone offers several options for organizing and accessing your voicemail.

Using Expert Mode





Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold **1**  to access your voicemail. (If your voicemail box contains any new or saved messages, press *** SHIFT** to access the main voicemail menu.)
2. Press **3**  to change your Personal Options, following the system prompts.
3. Press **3**  for Expert Mode.
4. Press **1**  to turn Expert Mode on or off.


Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **1**  to access your voicemail. (If your voicemail box contains any new or saved messages, press *** SHIFT** to access the main voicemail menu.)
2. Press **3**  to change your Personal Options, following the system prompts.
3. Press **1**  for “Settings”.
4. Press **5**  for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8**  after listening to a message. (Once the call is completed, you're returned to the voicemail main menu.)

Vicemail-to-Vicemail Message

Record and send a voice message to other Voicemail users.

1. From the main voicemail menu, press **2 ABC** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Vicemail-to-Vicemail Message Reply

Reply to a voice message received from any other Voicemail user.

1. After listening to a voice message, press **2 ABC**.
2. Follow the voice prompts to record and send your reply.




Vicemail-to-Vicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Voicemail users.

1. After listening to a message, press **6 MNO**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.



Vicemail-to-Vicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other users.

1. After you have recorded a message, press **1**  to indicate you are satisfied with the message you recorded.
2. Press **4**  to mark receipt requested.
3. Press **1**  to send your voicemail message.

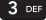 
Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing **1**  to indicate that you are satisfied with the message you recorded, press **4**  to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the available network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **3**  for Personal Options.

2. Press **2** ABC for Greetings.
3. Press **3** DEF to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **Menu > Messages > Voicemail > Clear Icon**.
2. Select **Yes** or **No** and press **MENU OK**.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1** ☒ Listen
 - 1** ☒ Date & Time Information
 - 2** ABC Reply
 - 3** DEF Advance 8 Seconds
 - 4** GHI Replay
 - 5** JKL Rewind
 - 6** MNO Forward Message

7 PQRS Erase

8 TUV Callback

9 WXYZ Save

0 +NEXT Options

2 ABC Send a Message

3 DEF Personal Options

1 ☒ Settings

1 ☒ Skip Passcode

2 ABC Auto-Play

3 DEF Message Date & Time On/Off

4 GHI Change Passcode

5 JKL Group Distribution List

6 MNO Numeric Pages

* SHIFT Return to Personal Options Menu

2 ABC Greetings

1 ☒ 1 Personal Greeting

2 ABC Name Announcement

3 DEF Extended Absence Greeting

* SHIFT Return to Personal Options Menu

3 DEF Expert Mode On/Off

8 TUV Place a Call


* SHIFT Disconnect




Using SMS Text Messaging

With SMS Text Messaging, you can send instant text messages from your phone to other people's messaging-ready wireless phones -- and they can send messages to you. When you receive a new message, it will automatically be displayed on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. You can also customize your own preset messages (up to 100 characters) from your phone.


Composing SMS Text Messages

1. Press **Menu > Messages > Send Message > Text Message** and select the entry method you prefer:
 - **Go to Contacts** to select a recipient from your internal Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
 - **New Addr** (right softkey) to use the keypad to enter the wireless phone number or email address of the person to whom you wish to send a message.
2. Press .

3. Highlight **OPTIONS** and scroll to **Priority** and press your navigation key right or left to set the message Mark as Urgent (**Normal** or **Urgent**).
4. If you wish to change your callback number, scroll to it and press , then select **None**, **My Phone Number**, or **Other**, and press . (If you select **Other**, enter the desired number and press .)
5. Press **DONE** (left softkey).
6. Press **SEND** (left softkey) to send the message.

Accessing SMS Text Messages

To read an SMS Text message:



- ▶ When you receive a text message, it will automatically appear on your phone's main display screen. Highlight the message you wish to view and press  to select it. Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. Press **Menu > Messages > Send Message > Text Message** and select the recent list.

2. Follow steps 3-7 under "Composing SMS Text Messages" on page 157 to complete and send your reply.

Sending a Text Message Using the QWERTY Keyboard

1. Slide open the QWERTY keyboard.
2. Select **Messages** > **Send Message** > **Text Message**.
3. Press **NEW ADDR** (right softkey).
 - Enter a wireless phone number or an email address and press .
 - or –
 - Use the navigation key to select a contact and press .
4. Use the keyboard to enter your message.
5. Press **SEND** (left softkey).

Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To add or edit preset messages:

1. Press **Menu > Settings > Messages > Preset Messages > ADD**.
2. Enter your new message or changes and press **MENU OK**.
(See “Entering Text” on page 39.)

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press *** SHIFT 6 MNO 7 PQRS**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call your service provider.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, enter the second number you wish to call and press **TALK**. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press **TALK** again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press *** SHIFT 7 PORS 2 ABC**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press *** SHIFT 7 PORS 2 ABC 0⁺ NEXT**.
2. Press **TALK**. (You will see a message and hear a tone to confirm the deactivation.)

Note: You may be charged a higher rate for calls you have forwarded.

Data Services

In This Section

- ◆ Data Service Applications
 - ◆ Getting Started With Data Services
 - ◆ Downloading Content
 - ◆ Exploring the Web
 - ◆ Data Services FAQs
-

Data service offers easy and amazing features you will really use. These services – including messaging, games, downloadable ringers and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the available network.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of data service.

Data Service Applications

Here is a brief list of the applications available through your phone. For more information, please contact your service provider.

Games—Download exciting games with full-color graphics and sound.

Ringers—Personalize your phone by downloading and assigning different ringers to numbers in your Contacts.

Screen Savers—Download unique images to use as screen savers—or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web—Access up-to-date news and information from your phone.

Getting Started With Data Services

This section will help you learn the basics of using your data service, including managing your user name, launching a data connection, and navigating the Web with your phone.

Your User Name

When you buy a phone and sign up for service, you're automatically assigned a user name, which is typically based on your wireless phone number.

When you use data services, your user name is submitted to identify you to the available network. The user name is also useful as a way to personalize services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

To find your user name:

- You can find your user name under the **Phone Information** option in your phone's **Settings** menu (**Menu > Settings > Phone Information > Version**).

Launching Data Services

To launch data services:

- ▶ Select **Menu > Web**. (Your data services connection will open and your home page will be displayed.)

Note: If Net Guard is enabled and displayed, press **Connect** (left softkey) to continue and access the Web.

While connecting, the following will appear on the screen:
Connecting...

If you had a previous data connection, you may not see the “Connecting...” message when you launch the session. Though the browser is open, you are not currently in an active data session— that is, no data is being sent or received. As soon as you navigate to another page, the active session will open and you will see the “Connecting...” message.

Net Guard

When you first launch data services, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.




To change your Net Guard settings:

- ▶ Select **Menu > Settings > More... > Data > Net Guard** and choose an option:
 - **On** to activate the Net Guard.
 - **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely reconnecting due to a time-out.

Connection Status and Indicators

Your phone's display lets you know the current status of your data connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your data connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the data connection will terminate.
-  Your data connection is dormant. (No data is being sent or received.) Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access data service features.

If no indicator appears, your phone does not have a current data connection. To launch a connection, see “Launching Data Services” on page 177.

Navigation in Data Services


Navigation in data services is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

While using data services, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigation, and they correspond to the softkey buttons directly below the phone's display screen.

Tip: Depending on the context, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything.

To scroll line by line:

- ▶ Press the navigation key up and down.


To scroll page by page:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use the softkeys and scroll, you can start navigating through the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight the desired item, and then press the desired softkey button (or press ).

Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

Tip: If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the 0 key on your phone's keypad, even though the number 0 doesn't appear on the screen.)

Links, which appear as underlined text, allow you to jump to different pages or select special functions.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the **BACK** key on your phone.


Note: The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page:

- ▶ Press and hold **BACK**.

– or –

Press **Menu** (right softkey) and select **Home** (**1** ).

Downloading Content

With data services and your new phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications.

Accessing the Download Menus

To access the download menus:


1. Select **Menu > My Stuff**.

2. Select the type of file you wish to download (**Games, Ringers, Screen Savers, or Applications**), and then select **Get New**. (Data Services will start and take you to the corresponding download menu.)

To access the download menus from the Web browser:

1. From the home page, select **Ringers, Screen Savers, Applications** or **Games**.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press . You will see a summary page for the item including its title, the download detail, and the cost. Select the Purchase link below the price to view the purchase confirmation page. Once on the purchase confirmation page, you will be shown more details about the download, as well as a link to view Terms & Conditions associated with the content.

To download a selected item:

1. From the information page, select the Ok link. (The item will download automatically).
2. Select an option to continue:

- Select **Use/Run/View** to assign the downloaded item (or to start it, in the case of a game or application). Your data session will end and you will be redirected to the appropriate phone menu screen.
- Select **Set as** to assign a ringer or screen saver to a phone function.
- Select **Settings** to configure downloaded games or applications.
- Select **Shop** to browse for other items to download.
- Press **END** to quit the browser and return to standby mode.

For complete information and instructions on downloading Games, Ringers and Screen Savers, contact your service provider.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news and weather, and shop on your phone anywhere on the available network.

In addition to the features already covered in this section, the Data service home page offers access to these colorful, graphically rich Web categories, which may include **News, Weather, Entertainment, Sports, Money, Travel, Shopping,** and **Tools**, as well as other useful options such as **Search**. Many sites are available under more than one menu – choose the one that’s most convenient for you.

Using the Browser Menu

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific websites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional options to expand your use of the Web on your phone.

Opening the Browser Menu

You may open the browser menu anytime you have an active data session, from any page you are viewing.

To open the browser menu:




- ▶ Press **OPTIONS** (right softkey). (You will see the browser menu.)

Options available under the browser menu include:

- **BACK** to go back to the most recent web page.
- **FORWARD** to move to a previously viewed page (after having used **BACK** option).
- **MY HOMEPAGE** to go back to the home page.
- **MY PAGES** to view your favorites and recently viewed pages.
- **SEARCH** to search the Internet.
- **OPTIONS** to choose font size, privacy settings, etc.

Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. Highlight the **URL** field and press .
2. Use your keypad to enter a website address and press .
3. Press  again to go to the website.

Note: Not all Web sites are viewable on your phone.

Restarting the Browser

If the browser appears to be malfunctioning or stops responding, you can often fix the problem by simply restarting the browser.

To restart the browser:

1. Press **OPTIONS** (right softkey) to open the browser menu.
2. Select **OPTIONS > Advanced > Reset browser**.

Note: A warning pop up message will appear stating that data (including favorites) will be deleted.

Data Services FAQs


How will I know when my phone is ready for data service?

Your user name will be displayed when you access **Menu > Settings > Phone Info > Version**.

How do I sign in for the first time?

You are signed in to access data services when you use Browser menu or send/receive picture messaging.

How do I know when my phone is connected to data services?


Your phone automatically connects when data service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use data services at the same time?

You cannot use voice and data services simultaneously. If you

receive a call while data service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to use Web or other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Menu > Settings > More... > Data > On/Off** in your phone's menu.

Music and Your Player

In This Section

- ◆ Using the Music Manager
 - ◆ Playing Music on Your Phone
-

With Rumor2 you have all your music in the palm of your hand. The Music Manager works hand in hand with Rumor2 to help keep your music files organized and in sync with your phone.

Using Music Manager

Rumor2 lets you use the Music Manager application to manage the music content on your computer and then easily copy it to your phone's microSD card. Just install the software and you're on your way. The Music Manager application helps you use your computer to organize, search for, and play music files. This phone does not support downloading or playing music purchased through the Music Manager or Digital Lounge.

Getting Music Manager

1. On your computer, go to website of your service provider and download the **Music Manager** application.
2. Follow the onscreen instructions to install and launch the application, including accepting the license agreement and rebooting your computer, if necessary.

Launching Music Manager

Double-click the **Music Manager** icon on your computer's desktop (or select **Start > Programs > Music Manager > Music Manager**). The application will launch and display the main menu.

Tip: The first time you use Music Manager, an onscreen Quick Start Guide will offer a tour of the application. Follow the instructions to learn more.

Overview of Music Manager

Music Manager makes it easy to organize music on your computer and transfer music to your phone's microSD card.

The Music Manager application screen is divided into three tabs:

- **Manage** allows you to organize and manage all the music on your computer. Click **Search** to look for compatible music files on your computer, and then use the window to organize your songs and create playlists. The Manage tab also has a built-in player to let you play your songs on your computer.
- **Transfer** makes it easy to transfer your music from your computer to your phone's microSD card, using a USB connection. (See "Connecting Your Phone to Your Computer" on page 120.)

Transferring Music to Your Phone

The Music Manager lets you transfer music from your computer to your phone's microSD card.

To transfer music to your phone:

1. Connect your phone and your computer using a compatible USB cable. (See "Connecting Your Phone to Your Computer" on page 120.)
2. Press **Menu > Tools > USB Mode > Transfer Music**.
3. With the Music Manager open on your computer, click the **Transfer** tab.


4. Double-click the **Songs** folder in the left pane.
5. Highlight all the songs you wish to download to your phone and then drag them to the gray **Music Transfer List** section at the bottom of the window.
6. Once you have all the songs you wish to transfer, click on the **TransferNow** button to begin copying the songs to your phone.
 - A red progress bar indicates the upload progress of each song to the phone.
7. Select **Done** to complete the transfer and return your phone to standby mode.

Warning : Do not disconnect phone while the transfer is in progress.

Note : A memory card is required to listen to any music stored or downloaded to the phone. The number of files you can store depends on the size and format options of the memory card.

Playing Music on Your Phone

The Media Player allows you use your phone to play the music files you have saved on your microSD card.

1. Press **Menu > Media Player**.
2. Using your navigation key, highlight the music file you would like to play and press .
3. For additional playback and information options, press **Options** (right softkey) and select a menu item.

Section 4

Safety and Warranty Information

Important Safety Information

In This Section

- ◆ General Precautions
 - ◆ Maintaining Safe Use of and Access to Your Phone
 - ◆ Caring for the Battery
 - ◆ Radiofrequency (RF) Energy
 - ◆ Owner's Record
 - ◆ Phone Guide Proprietary Notice
-

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF

signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer about any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.

- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, flammable liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that use your airtime balance.

Using Your Phone With a Hearing Aid Device

A number of phones offered by your service provider have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones

that have been rated have a label located on the box. Your Rumor2™ has an M3 and a T3 rating.

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings.) Note that not all hearing devices have telecoils in them.)

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. LG is not aware of similar problems with LG phones resulting from the proper use of batteries and accessories approved by LG. Use only approved batteries and accessories found through LG. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radiofrequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 7/16 inch (1.5 centimeters) from your body when transmitting. Use of non-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the Rumor2 are:
Head: 1.22 W/kg; Body-worn: 0.733 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: BEJLX260.

More information on the phone's SAR can be found from the following FCC Web site:

<http://www.fcc.gov/oet/fccid>.

Note: Bluetooth QD ID (Qualified Design ID) is mandatory marking by Bluetooth SIG (Bluetooth Special Interest Group) for all models supporting Bluetooth.

Bluetooth QD ID B012917

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Rumor2 by LG®

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Manufacturer's Warranty

In This Section

- ◆ **Manufacturer's Warranty**

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Manufacturer's Warranty

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit, and its enclosed accessories, will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in ways other than its intended manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, expressed or implied, either in fact or by operations of law, statutory or otherwise, including, but not limited to, any implied warranty of marketability, merchantability, or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

LG Electronics Service

201 James Record Road

Huntsville, AL 35824

Tel. 1-800-793-8896 Email: <http://us.lgservice.com>

Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

A

- Adding a New Contacts Entry 91
- Adding a Phone Number 94
- Airplane/Music Mode 61
- Alarm Clock 106
- Answering Calls 29
- Assigning Speed Dial Numbers 96

B

- Battery 21-24
 - Capacity 21
 - Charging 23
 - Installing 22
 - Removing 22
- Bluetooth 137-144
 - Pairing 144
 - Turning Bluetooth On and Off 138
- Bluetooth Profiles 142
- Bluetooth Settings 139
- Browser Menu 175

C

- Calculator 108
- Calendar 101-105

Call History 83-89

- Erasing 89
- Making a Call From 86
- Prepending a Phone Number 88
- Saving a Phone Number From 87
- Call History Options 85
- Call Waiting 161
- Caller ID 160
- Calling Emergency Numbers 31
- Contacts Entry Options 93

D

- Data Services 164
- Dialing Options 28
- Dialing Services 99
- Display Screen 14
- Display Settings 52

E

- Editing a Contacts 95
- Editing a Contacts Entry 98
- End-of-Call Options 33
- Entering Text 39-45
 - Abc Mode 42

Preset Messages 43
Symbols 43
EzTip Calculator 108

F
Features 17
Finding Contacts Entries 92
Front View 9

G
Getting Help 5
Getting Started 3

I
In-Call Options 32
Introduction i

K
Key Functions 10

L
Location Settings 57
Lock Code
 Changing 70
Locking Your Phone 69

M
Making Calls 27
Menu ii

Messaging Settings 58
microSD Card 114
microSD Card and Adapter
 115
microSD Folders 119
microSD Settings 118
Missed Call Notification 30

N
Notepad 107

P
Phone Number
 Displaying 26
 Finding 35
 Saving 34
Phone Setup Options 64

Q
QWERTY® Keyboard 44

R
Roaming Experience 76

S
Saving a Phone Number 34
Security 68-75
 Security Menu 69

Selecting a RingType for an Entry 98

Send All Contacts 97

Sending a Picture Message 134

Setting Up Service 2

Setting Up Your Voicemail 4

Setting Your Phone's Roam Mode 79

SMS Text Messaging 157-163

Sound Settings 47

Special Numbers 71

Storing Pictures and Videos 129

T

T9 Text Input 40

Taking Camera 123

The Basics 8

TTY 62

Turning Your Phone Off 21

Turning Your Phone On and Off 20

U

Understanding Roaming 77

Unlocking Your Phone 70

Using Call Guard 80

Using Contacts 90

Using Data Roam Guard 82

Using the Charger 24

V

Viewing History 84

Voice Memos 112-113

Voice Services 111-113

Voicemail

 Menu Key 155

 Options 151

 Retrieving 149

 Setting Up 147

W

Warranty 195

